




**WE PUT EVERYTHING WITHIN REACH.**

---

# Ladder Hook Adjustment Guide

---

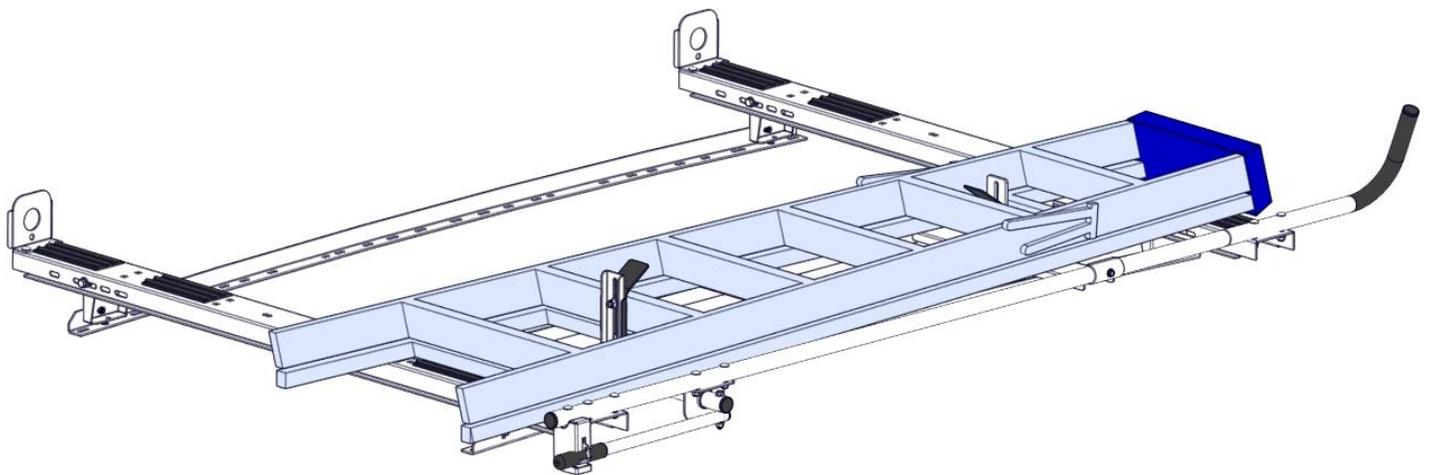

---

Kargo Master  
Rancho Cordova, CA 95742  
800-343-7486  
CustomerService@KargoMaster.com

---

**\* PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT. \***

**Warning**



**Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.**



**DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF.**

**Tools Needed**

9/16" Box Wrench
------------------

**Table of Contents**

Before You Begin .....	1
Adjustment Instructions.....	2
Clamp Mechanism Orientation and Angled Pad Positions.....	6
Examples of Ladder Clamps Firmly Against Ladder Rungs .....	6


**Before You Begin**

- Read all instructions before installing or adjusting any Kargo Master rack or accessory.
  - Different ladders will use a variety of different hook mounting locations and orientations.
  - **Ensure the ladder is securely held to rack prior to transportation.**
  - [Follow this link to access our adjustment video](#)
- OR
- **Visit our Kargo Master Youtube channel.**


## DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF

### Adjustment Instructions


- Locate the angled pads.
- Loosen the bolt on both front and rear ladder stop angled pads, adjust them all the way up, and tighten the nuts.

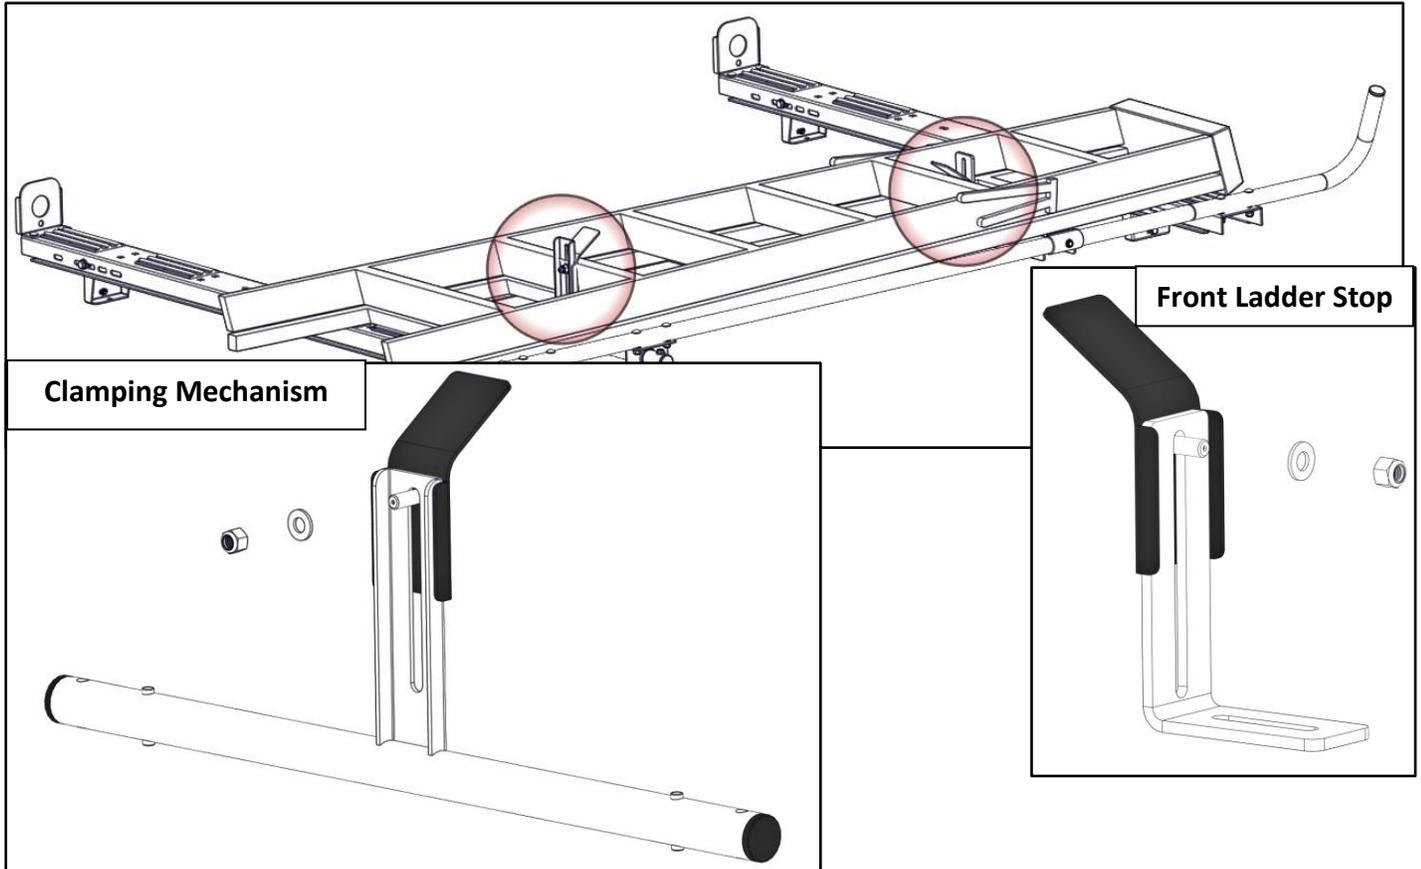



- Loosen the bolt that secures the front ladder stop to the cross member.

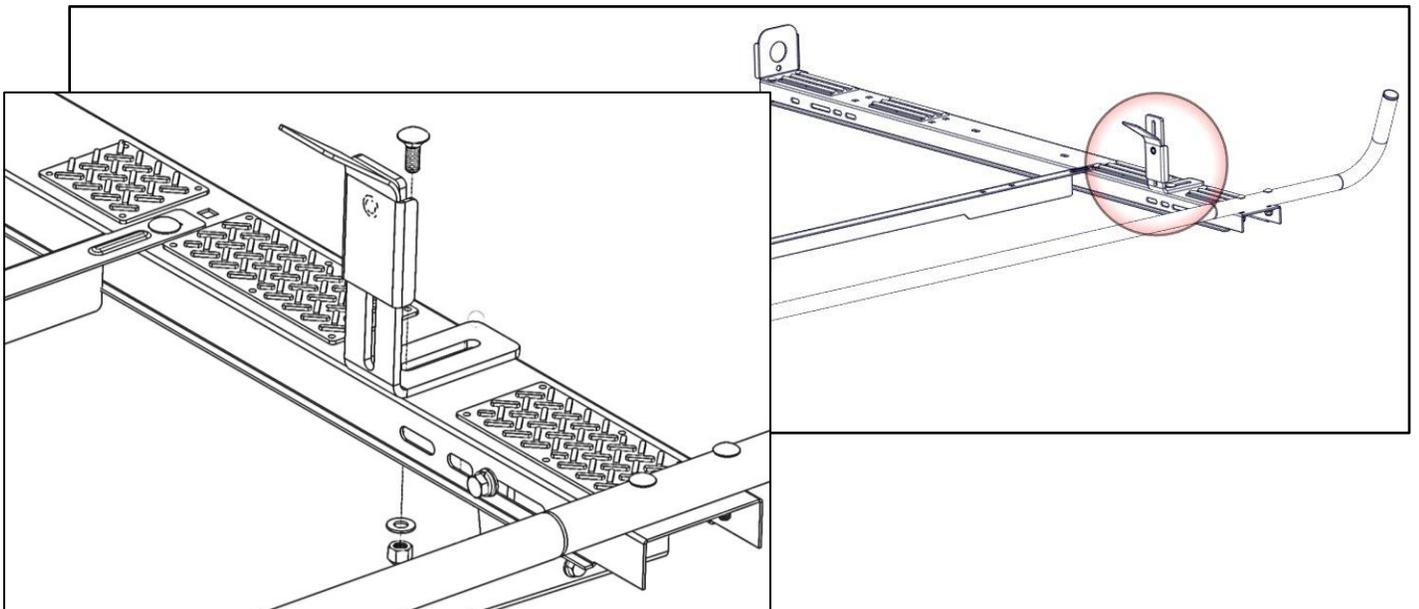


- Lower the clamping mechanism and load the ladder onto the rack.

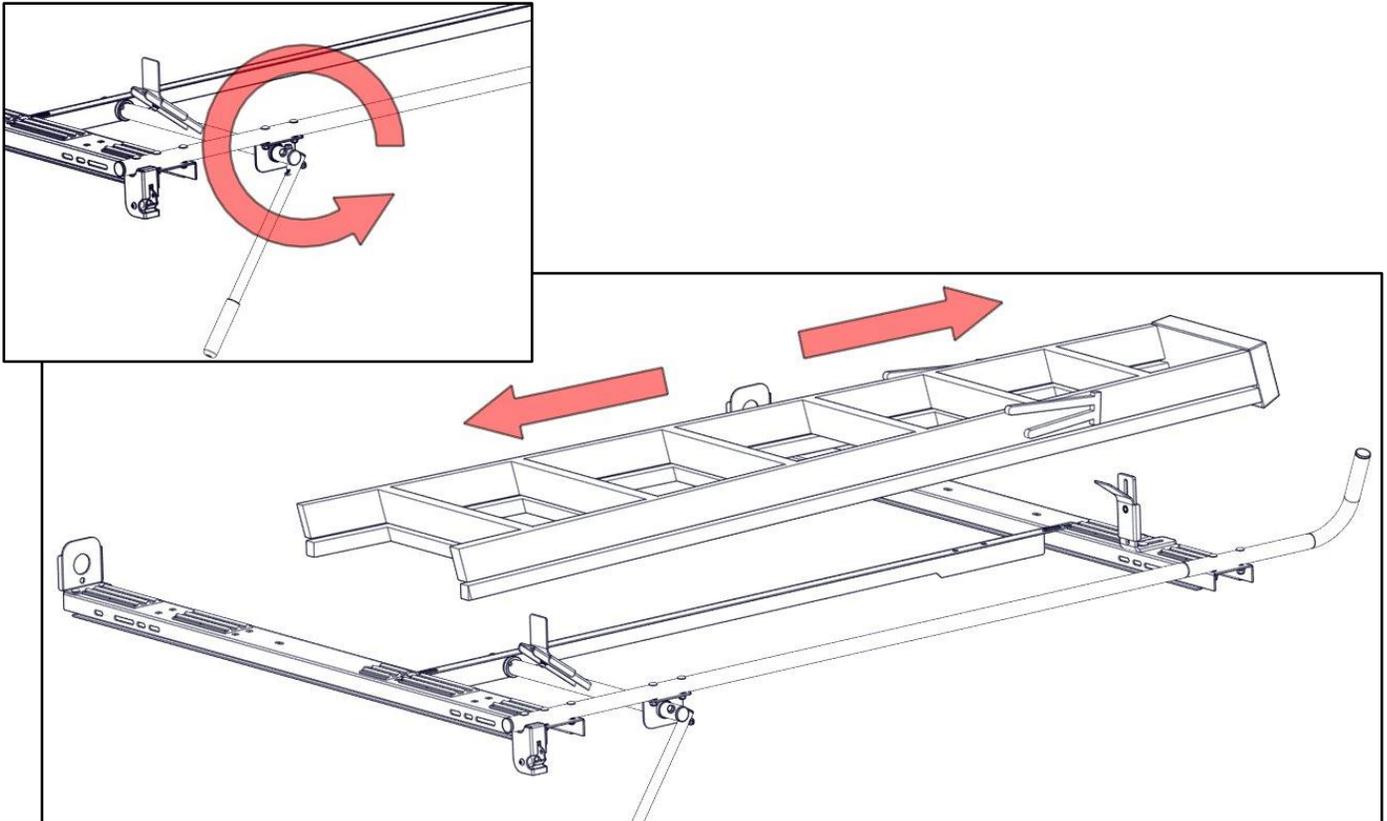



- Raise the clamping mechanism and lock the handle in the handle latch.
- Press ladder against the rear clamping mechanism.
- Loosen the hardware on the back of front ladder stop angled pad.
- Pressing on the ladder towards the rear, adjust angled pad downwards until it is firmly against the ladder.

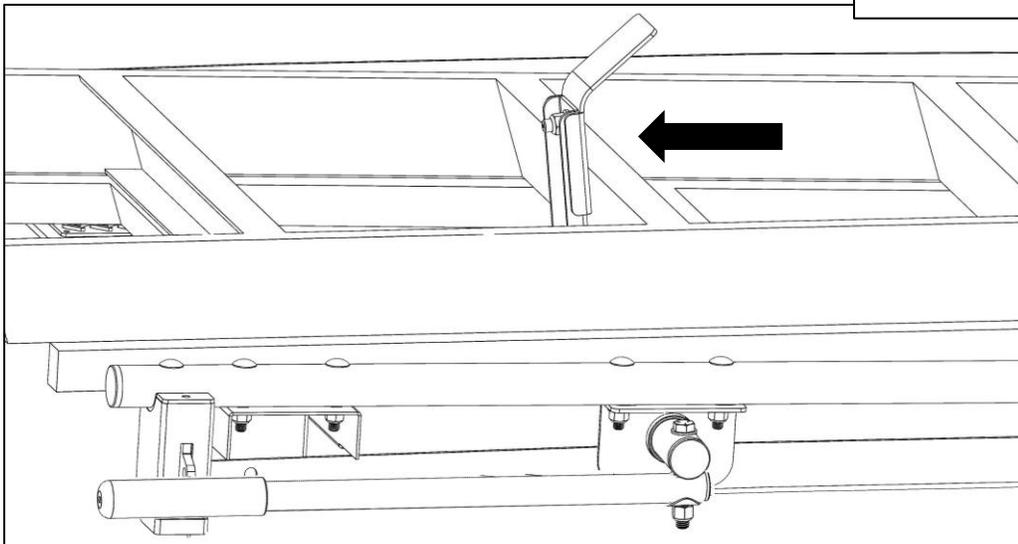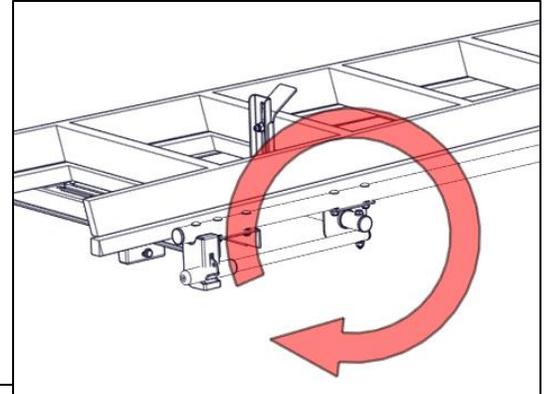



- Tighten the nut securing the angled pad to the ladder stop.

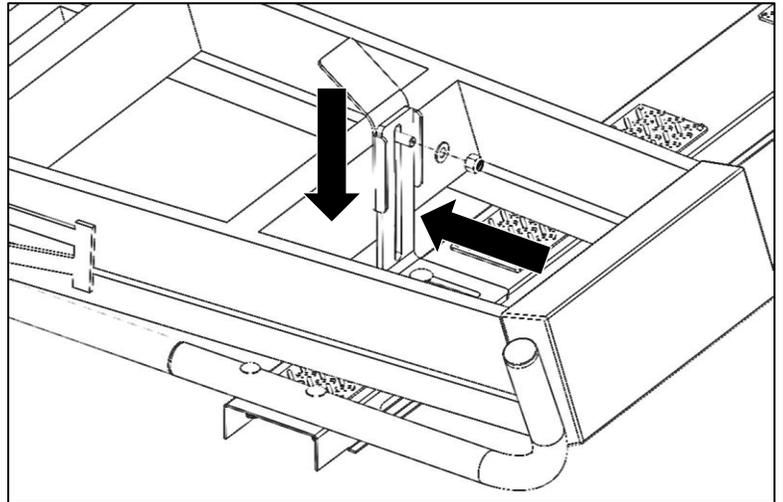

- Press the ladder towards the rear and the angle pads against the ladder rung, tighten the bolt securing the front ladder stop to the front bow.

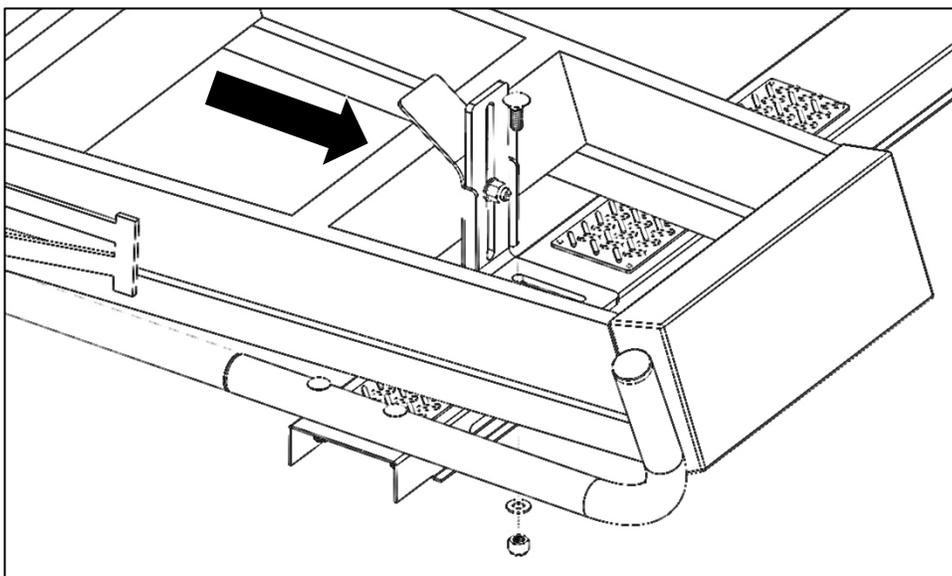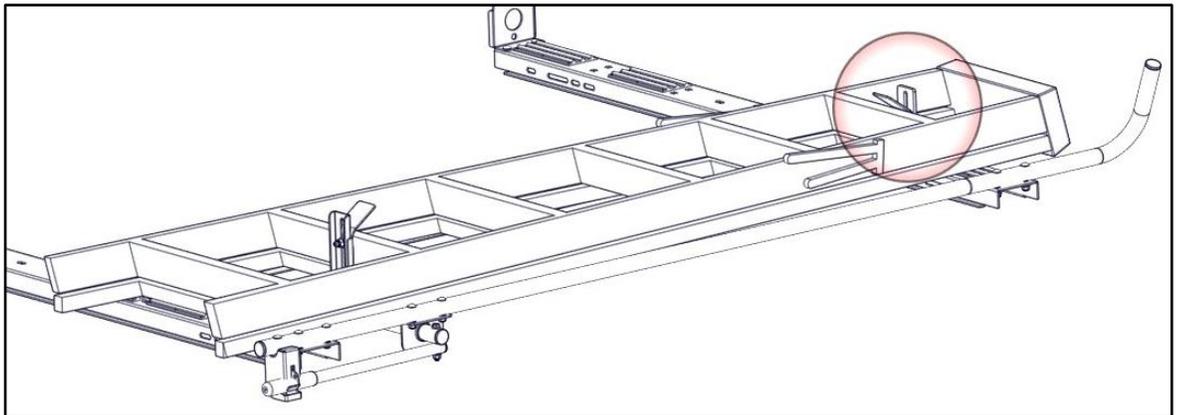


- Loosen the bolt securing the angled pad to the clamping mechanism.
- Unlatch the handle from the handle latch and, while holding the clamping mechanism in place, adjust the angled pad downwards until it sits firmly against the top of the ladder.
- Secure the handle into the handle latch and tighten the nut.

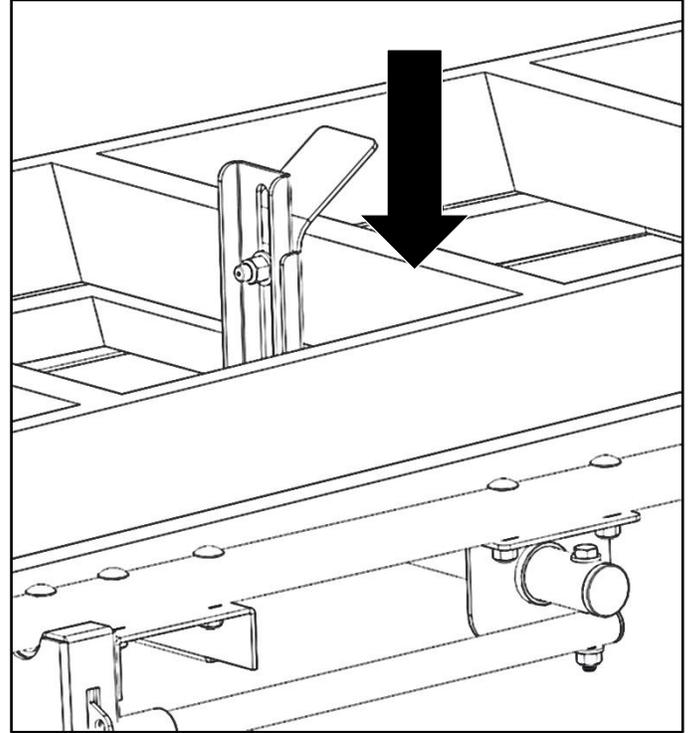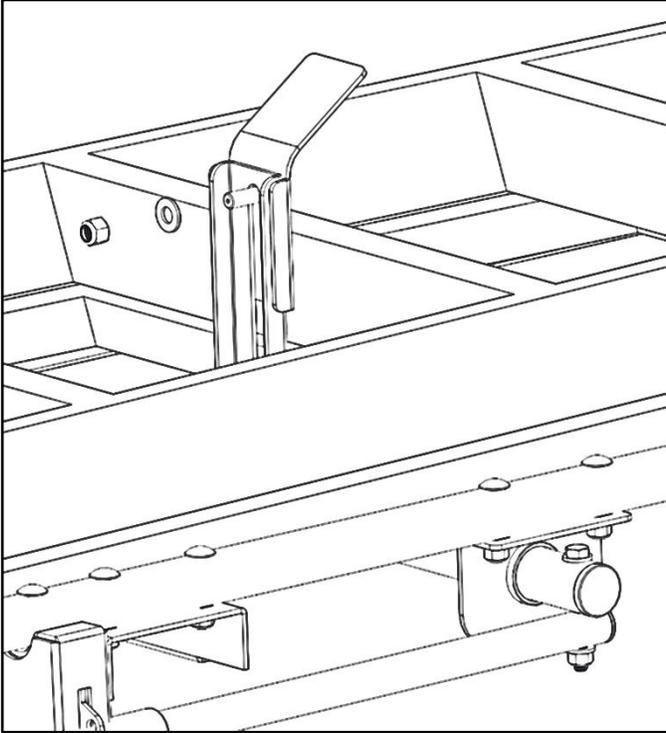

- The ladder rack is now adjusted for the ladder. To adjust to a different ladder, repeat the process.


**\*\*BE SURE TO HAVE FIRM CONTACT ON BOTH LOCATIONS SHOWN BELOW\*\***

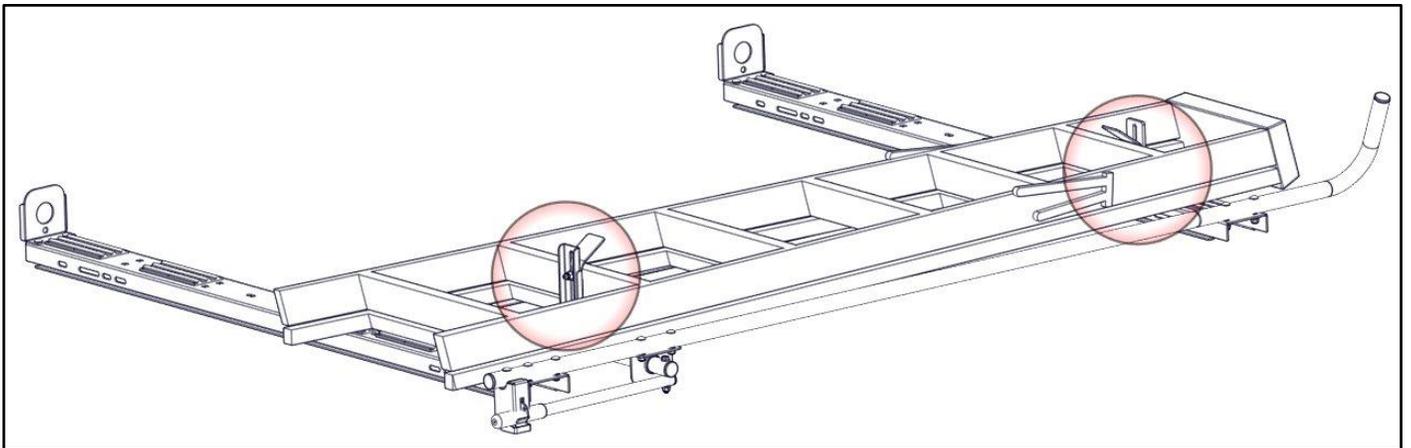


**\*\* IT IS RECOMMENDED TO HAVE A TIE DOWN SECURING THE LADDER TO THE RACK DURING TRANSPORTATION. \*\***

**See next pages for different orientations and locations for angled pads.**

**Angle Pad Orientations and Locations**


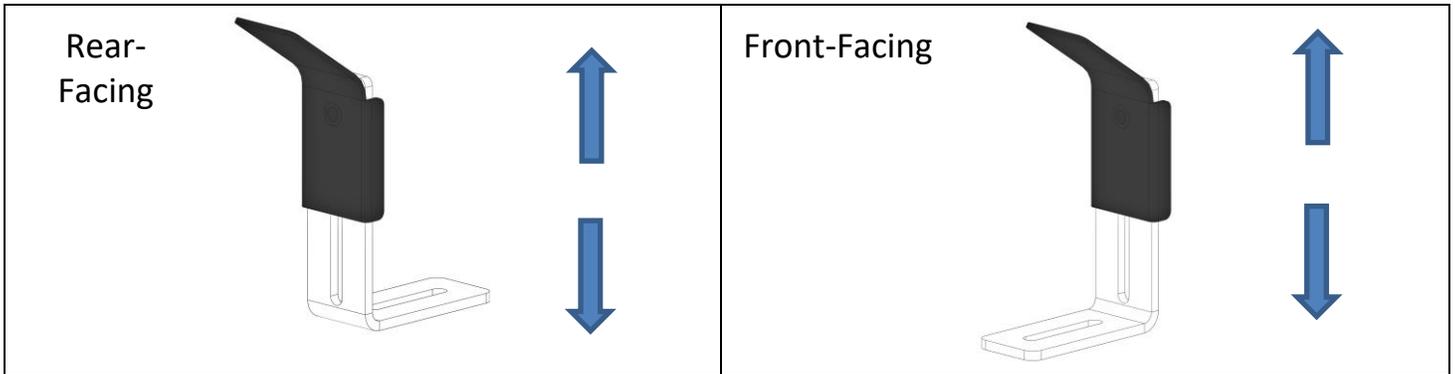


**Clamp Mechanism Orientation and Angled Pad Positions**

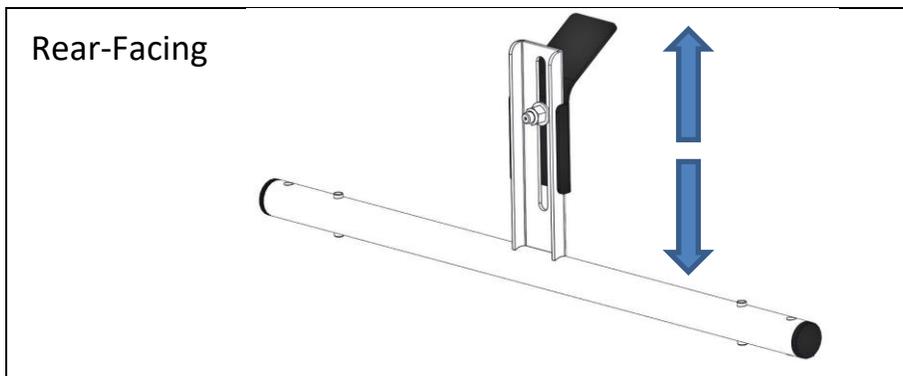

**Examples of Ladder Clamps Firmly Against Ladder Rungs**

- The ladder hook should be positioned in a way so the hook clamps the ladder tight into place. A tight fit ensures the ladder cannot fall off the rack.

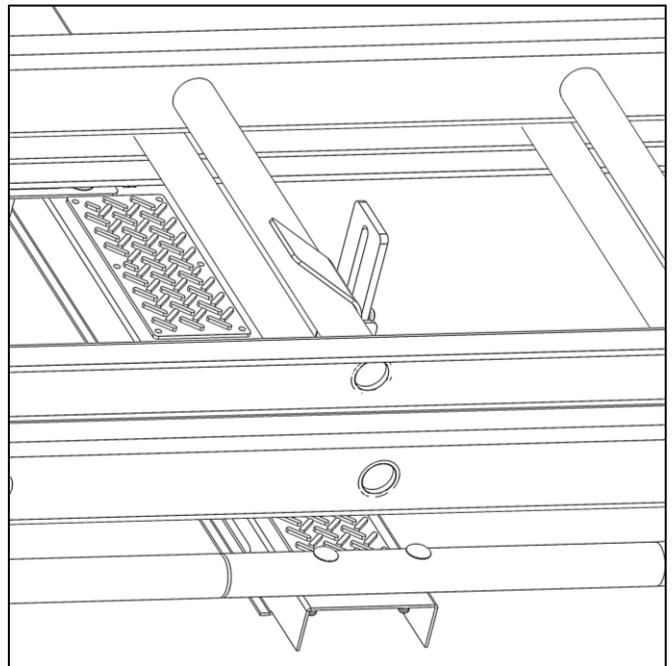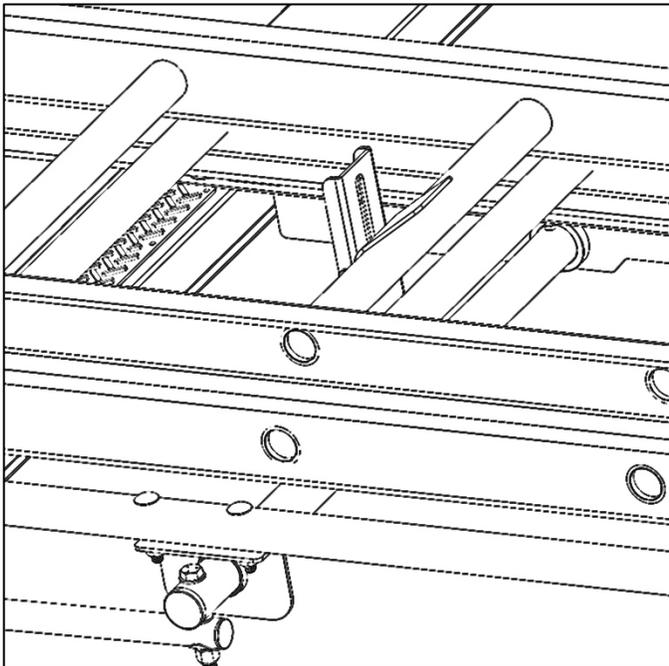

**\*\* BE SURE THE LADDER HOOKS ARE FIRMLY AGAINST THE LADDER STEPS OR RUNGS. \*\***