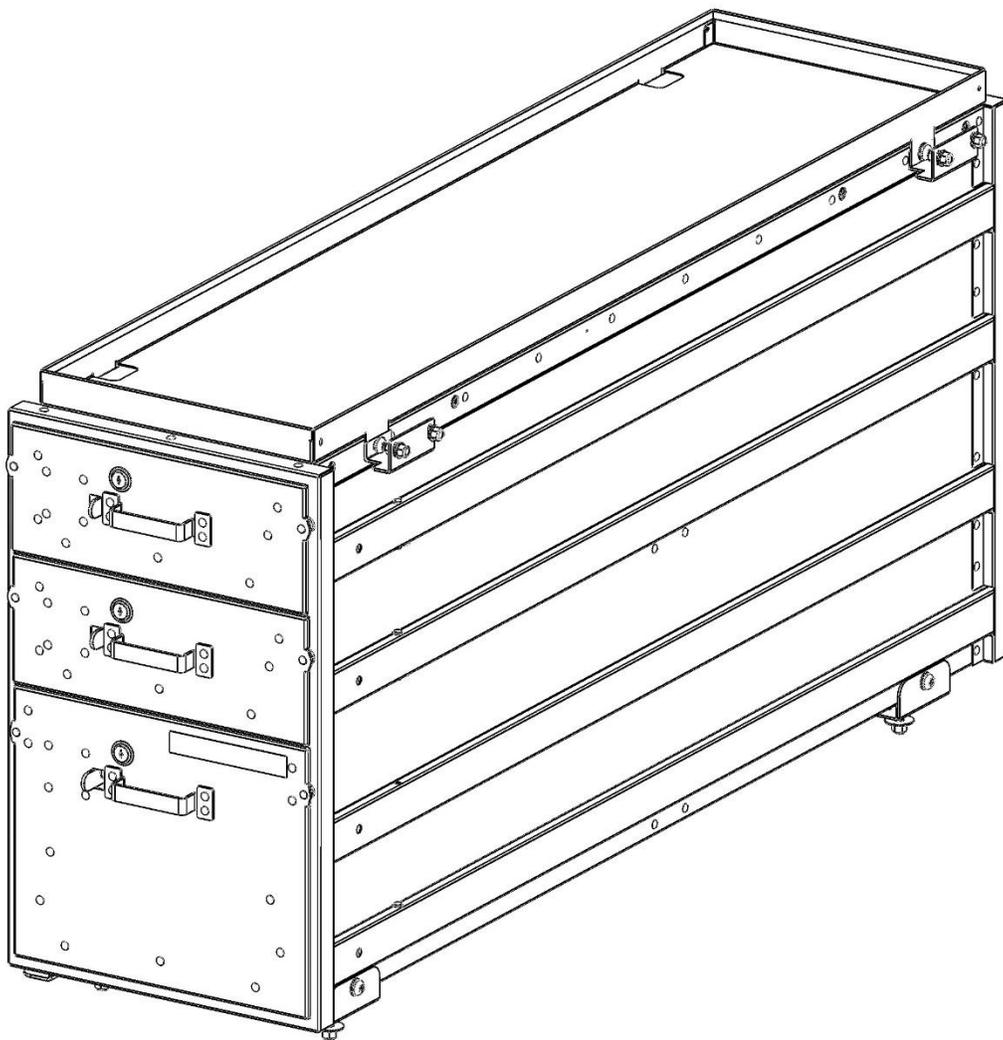


Holman

Installation Guide 40250



Holman
Rancho Cordova, CA 95742
800-343-7486

InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Table of Contents

Tools Needed 1

Before You Begin 1

Parts List 2

Hardware 2

Hardware Continued 3

Step 1 – Install Brackets onto Main Unit 3

Step 2 – Remove Drawers 4

Step 3 – Determine Installation Location 4

Step 4 – Mount Feet to floor 5

Step 5 – Install Main Unit 6

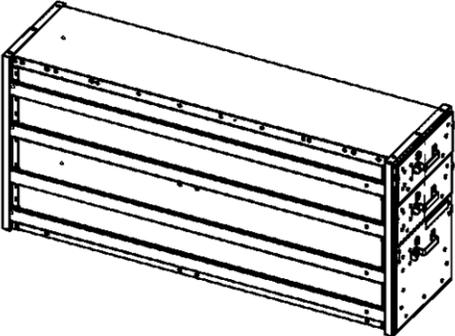

Tools Needed

7/16", 1/2", 9/16" Socket and Wrench	7/16", 1/2", 9/16" Box Wrench
5/16" Drill Bit	Drill
Tape Measure	3/16" Allen Wrench
Drill Bit Stop Collar	

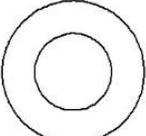
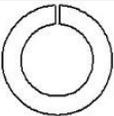
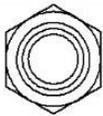
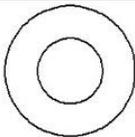
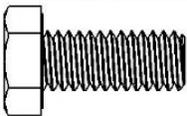
Before You Begin

- Read all instructions prior to assembling or installing any Holman product.
- **Always locate your installation locations prior to performing any work.**
- **ENSURE SAFETY WHILE INSTALLING OR DRILLING INTO VEHICLE.**
- Recommended installation location and method are shown in this document; additional brackets have been included to allow for other installation methods.

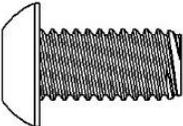
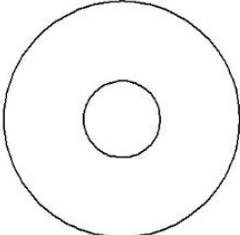
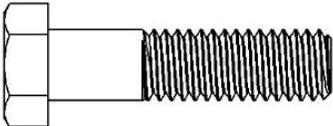
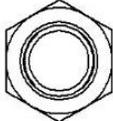
Parts List

NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		101410	MAIN DRAWER UNIT	1
2		40250-10-11	PARTITION MOUNT	2
3		40250-10-12	FLOOR MOUNT	2
4		40250-30-12	BASE ANGLE MOUNT	2
5		40250-50	TOP TRAY	1
6		40140	PLASTIC DRAWER BIN	4
7		18-00580	HARDWARE KIT	1

Hardware

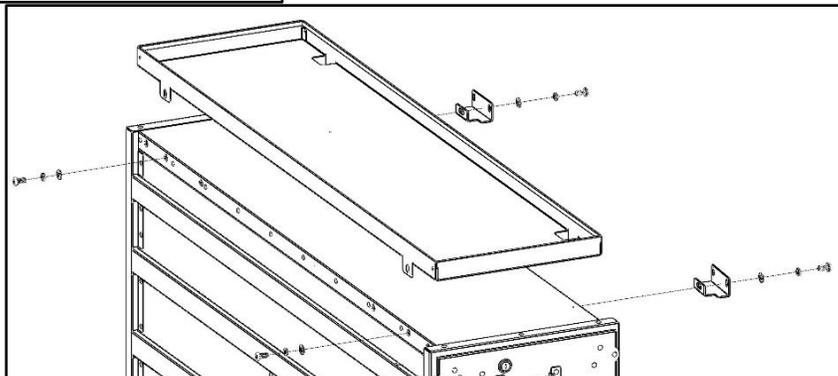
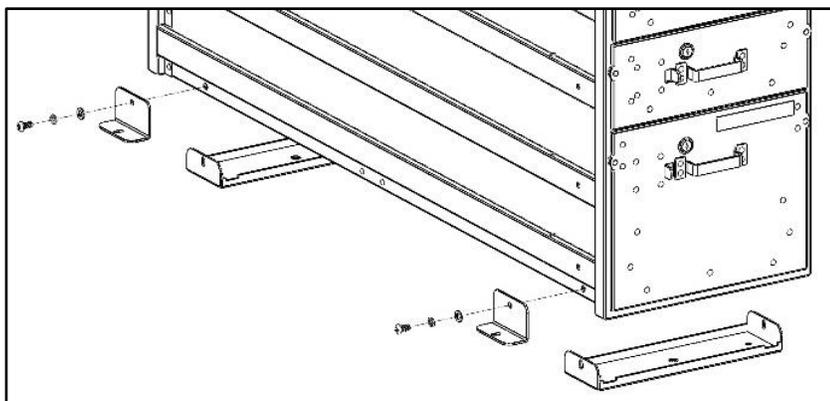
ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
5		0159723	3/8" WASHER	12
6		0123496	3/8" SPLIT LOCK WASHER	8
7		0169777	5/16"-18 NYLOC	4
8		33080	5/16" WASHER	8
9		11241178	5/16-18 X 3/4" HEX HEAD BOLT	4

Hardware Continued

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		94090	3/8-16 X 3/4" BUTTON HEAD SCREW	8
2		33220	3/8" FENDER WASHER	4
3		11241199	3/8"-16 X 1-1/2" HEX HEAD	4
4		0169791	3/8"-16 LOCK NUT	4

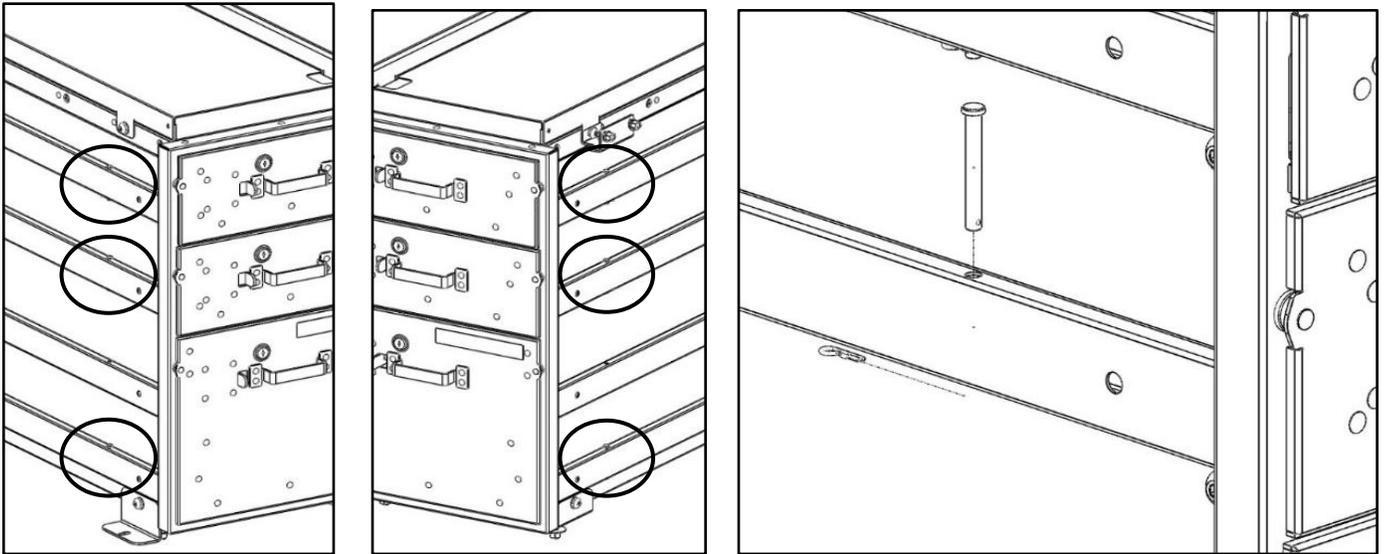
Step 1 – Install Brackets onto Main Unit

- Attach the floor mounts and base angle mounts to the unit using four 3/8-16 x 3/4" button head screws, four 3/8" split lock washers, and four 3/8" washers.
- Attach the top pan and partition mounts to the unit using four 3/8-16 x 3/4" button head screws, four 3/8" split lock washers, and four 3/8" washers.



Step 2 – Remove Drawers

- The bottom drawer must be removed to access the mounting holes on the front foot of the unit. Removing the top two drawers is optional but make the unit lighter and easier to move in and out of the van.
- To remove a drawer from the unit, a hairpin clip and clevis pin must be removed from each side of the unit. **Be sure to replace these pins before use to ensure safe operation.**
- **With these pins removed the drawer can be pulled out of the unit. Set the drawers in a safe place to avoid damage until they are reinstalled.**

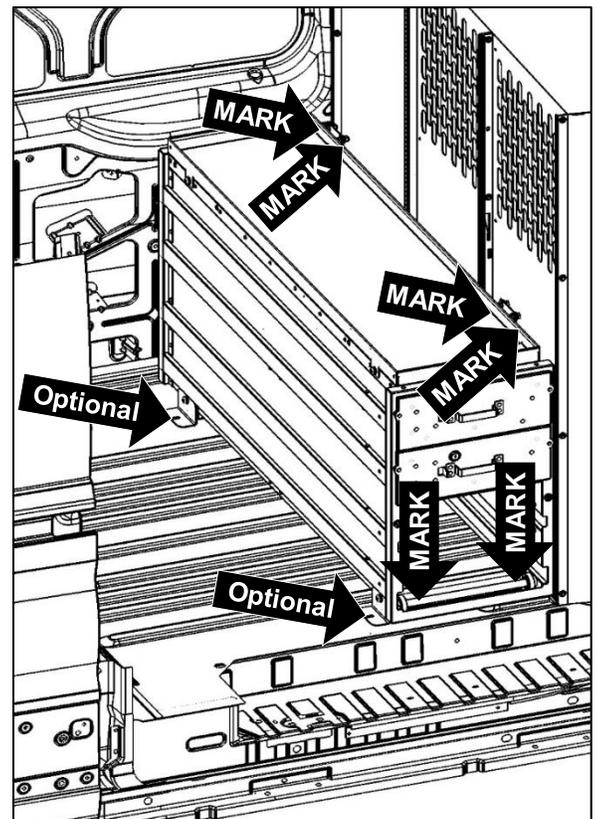


Step 3 – Determine Installation Location

- This product can be mounted in multiple different locations in the van. The standard install location, shown here, is against the partition of the van.
- Place the unit in the desired installation location
- Mark mounting holes shown below on the floor and partition.

Note: the holes on the angle mount brackets can be marked as well to help with alignment later, however these holes will not be used in the final install.

- Remove the unit from the van
- Uninstall the floor mounts from the unit.

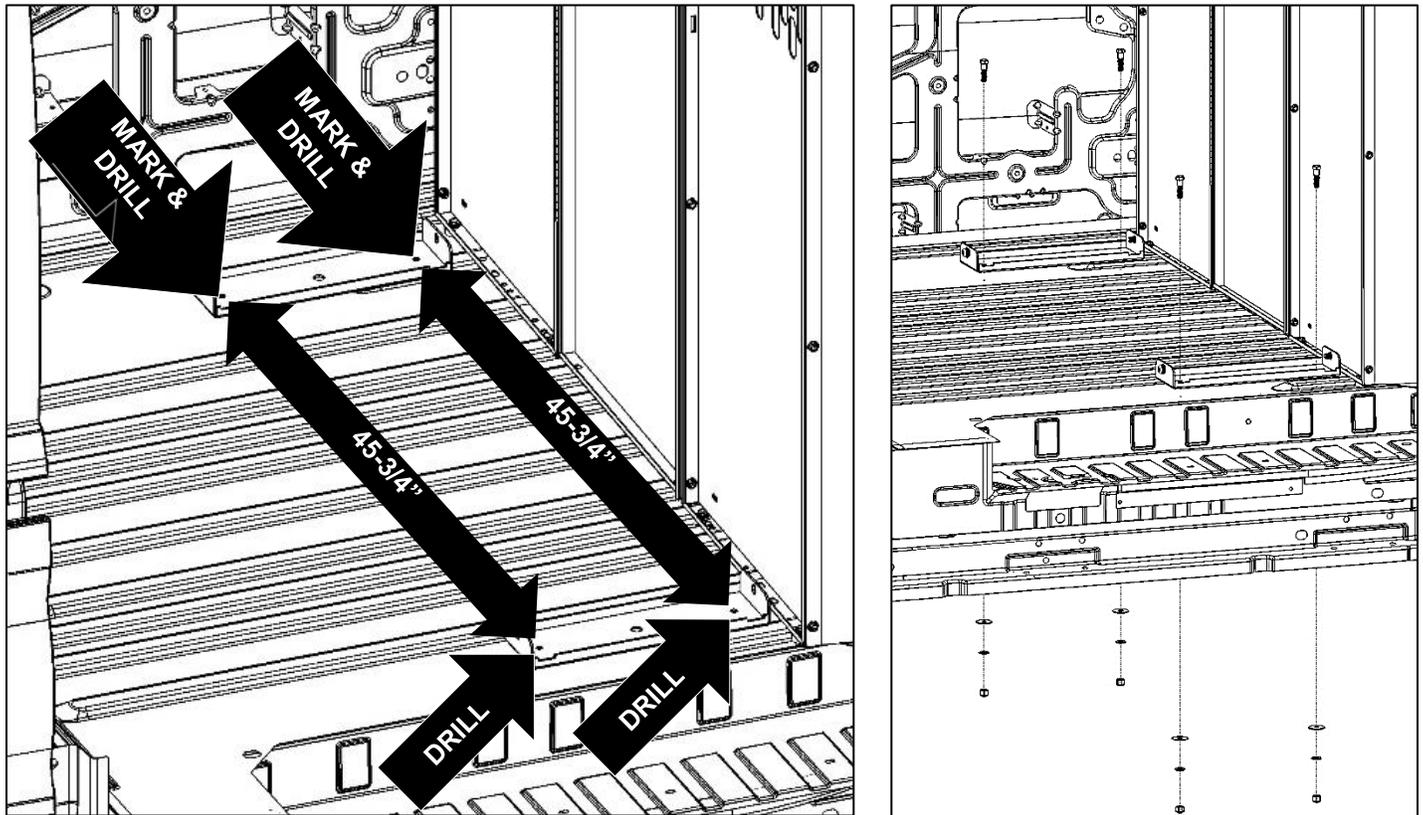


Step 4 – Mount Feet to floor

- Place the passenger side foot above the marks made in the previous step. The passenger side foot can be used as a reference for the driver side foot location. The center to center distance of the mounting holes should be 45-3/4". **Be sure the feet are aligned and squared or the unit may not mount properly.**
- Drill mounting holes and bolt the floor mount brackets in place using four 3/8"-16 x 1-1/2" hex head bolts, four 3/8" fender washers, four 3/8" washers, and 3/8" lock nuts.

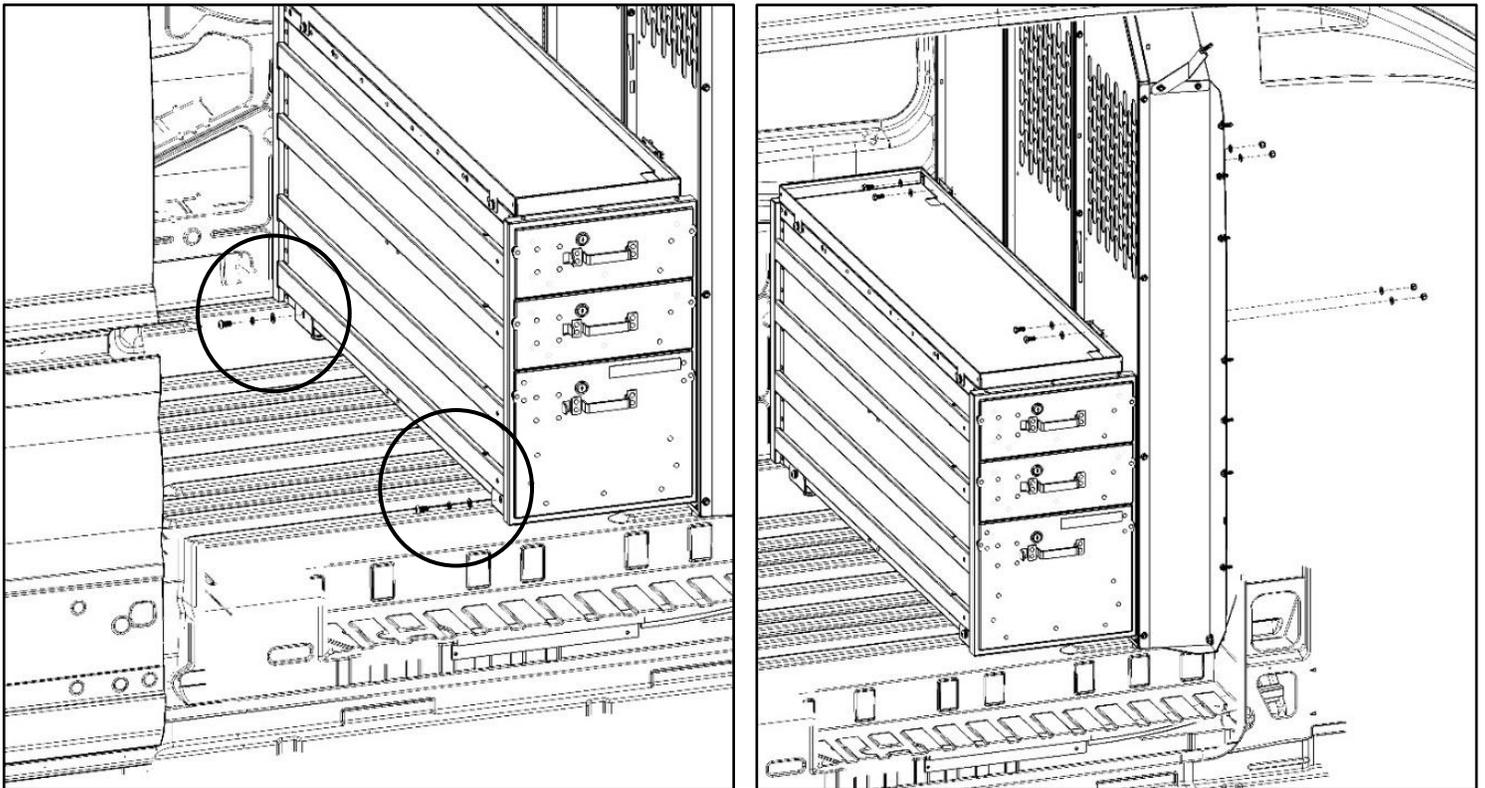


DO NOT drill beyond depth of floor or other installation surface. Use a drill bit stop collar. Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.



Step 5 – Install Main Unit

- Be sure to reinstall all drawers before installing the unit in the van as the drawer pins on the side of the unit against the partition will be inaccessible once the unit is in place.
- Place the box on top of the floor mount brackets and re-install the bolts on only the side facing away from the partition.
- Now bolt the partition mount brackets to the partition using four 5/16"-18 x 3/4" hex head bolts, eight 5/16" washers and four 5/16"-18 lock nuts.



GO BACK AND TIGHTEN ALL HARDWARE.

INSTALLATION IS COMPLETE.