


Holman

Installation Guide

40651-40652-40653-40655

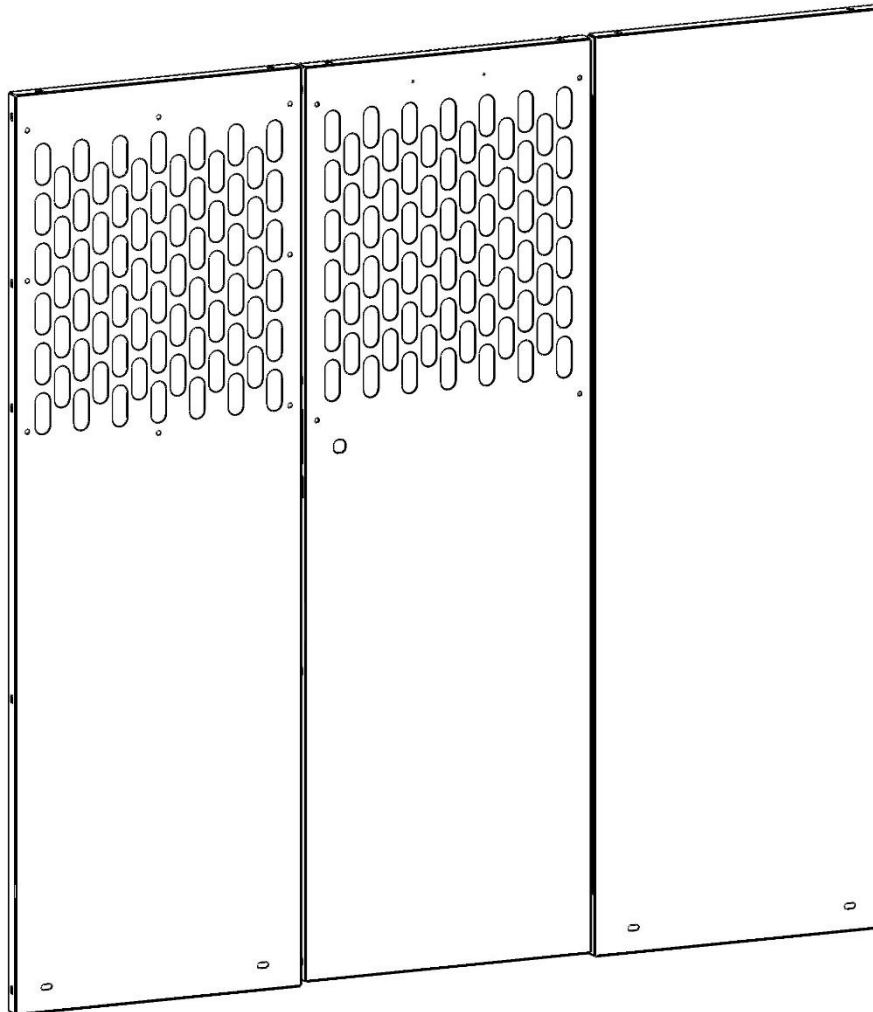

Holman
Rancho Cordova, CA 95742
800-343-7486

InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Table of Contents

Tools Needed	1
Before You Begin	1
Parts List.....	1
Hardware	2
Join Panels	3


Tools Needed

3/8" Socket and Wrench	7/16" Box Wrench
------------------------	------------------


Before You Begin

- Read all instructions prior to assembling or installing any Holman product.
- Use vehicle specific wing kit to complete installation.
- **Instructions are shown for a 40651. All instructions are the same for 40651, 40652, 40653, and 40651.**

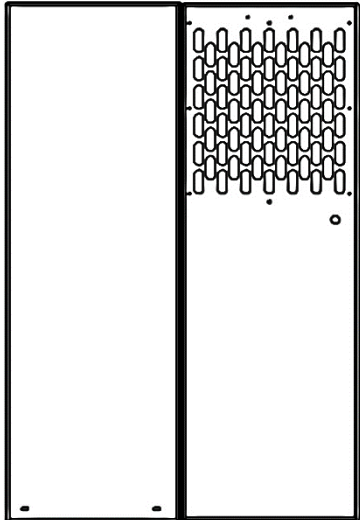


Parts List

NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		40650:40651-10 OR 40652:40652-10 OR 40655:40655-10	PARTITION DOOR ASSEMBLY OR SOLID PARTITION DOOR ASSEMBLY OR PARTITION DOOR ASSEMBLY W/ DOG DOOR	1

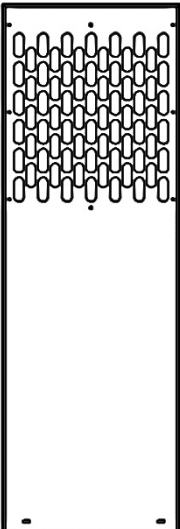Parts List (Continued)




NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
2		40650-40655: 40651-00-001 OR 40652: 40652-00-001	PARTITION SIDE PANEL OR SOLID PARTITION SIDE PANEL	1
3		18-40600	STANDARD PARTITION- HARDWARE	1

Hardware

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11126953	1/4"-20 X 5/8" FLANGED HEX HEAD	4
2		0167030	1/4"-20 FLANGED LOCK NUT	4
3		33078	1/4" FLAT WASHER	8

Join Panels

- Place both partition panels flat on the ground or table. **Be sure to have the flanges facing upward so you can access the bolt holes.**
- Bolt together using a 1/4" x 5/8" flanged hex bolt, 1/4" washer and a 1/4" flanged lock nut. **Be sure to put two 1/4" flat washers in between the door assembly and side panel. This is used to get correct spacing.**

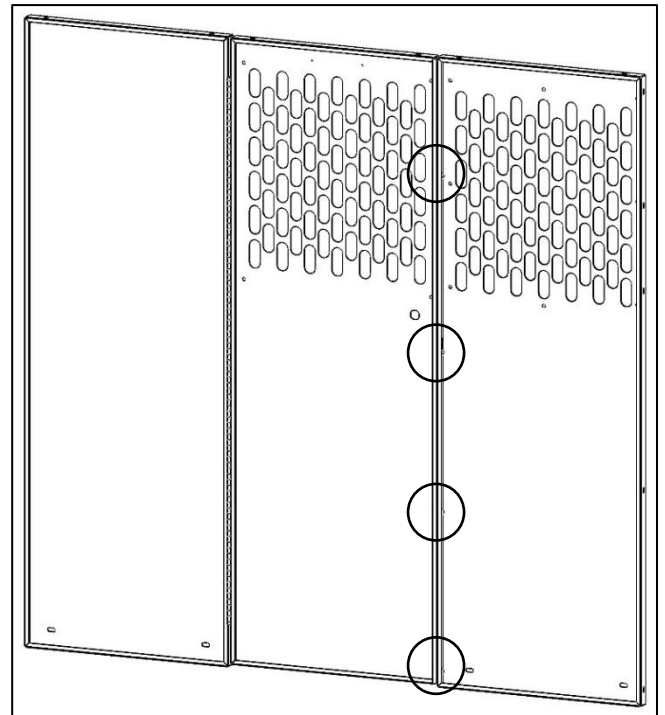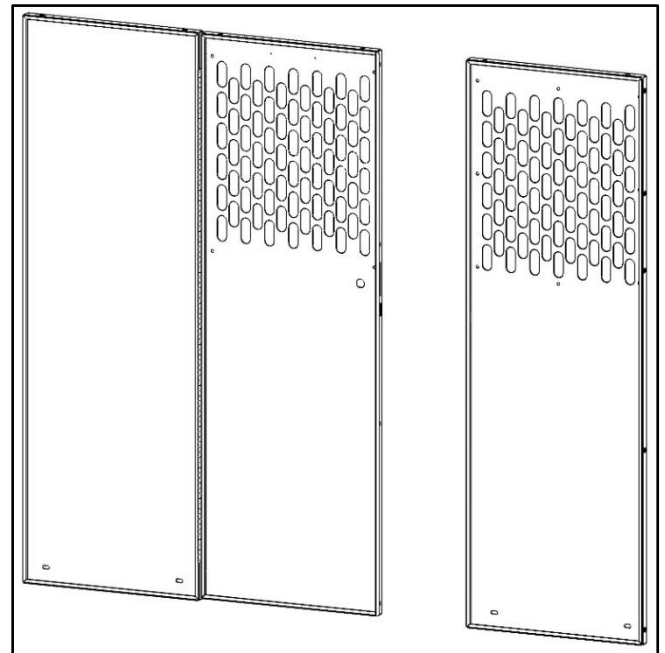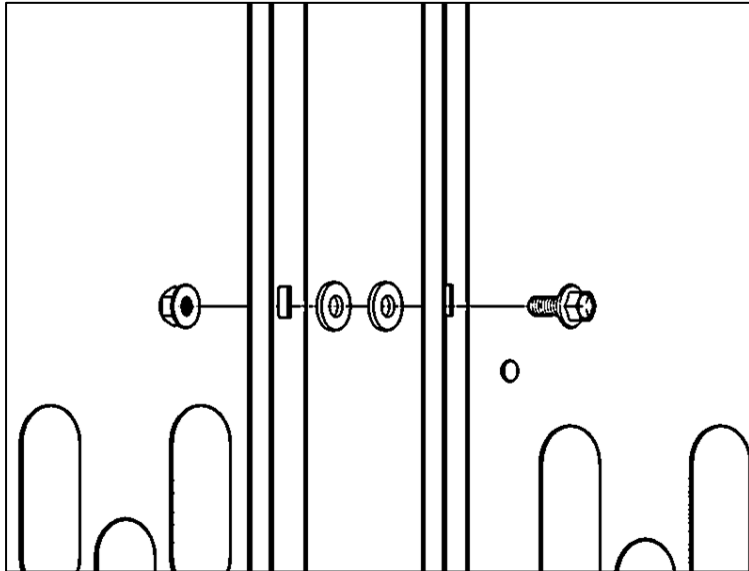

- Snug tighten nut but allow movement.
- Repeat three more times per the locations shown. **Be sure to insert the washers between the panels.**
- Leave bolts snug tight but allow movement until partition is installed into vehicle.

**FOLLOW INSTRUCTIONS OF
DESIRED WING KIT TO INSTALL
INTO VEHICLE.**

ASSEMBLY IS COMPLETE.