


Holman

Instruction Guide

40660-40661-40662-40665

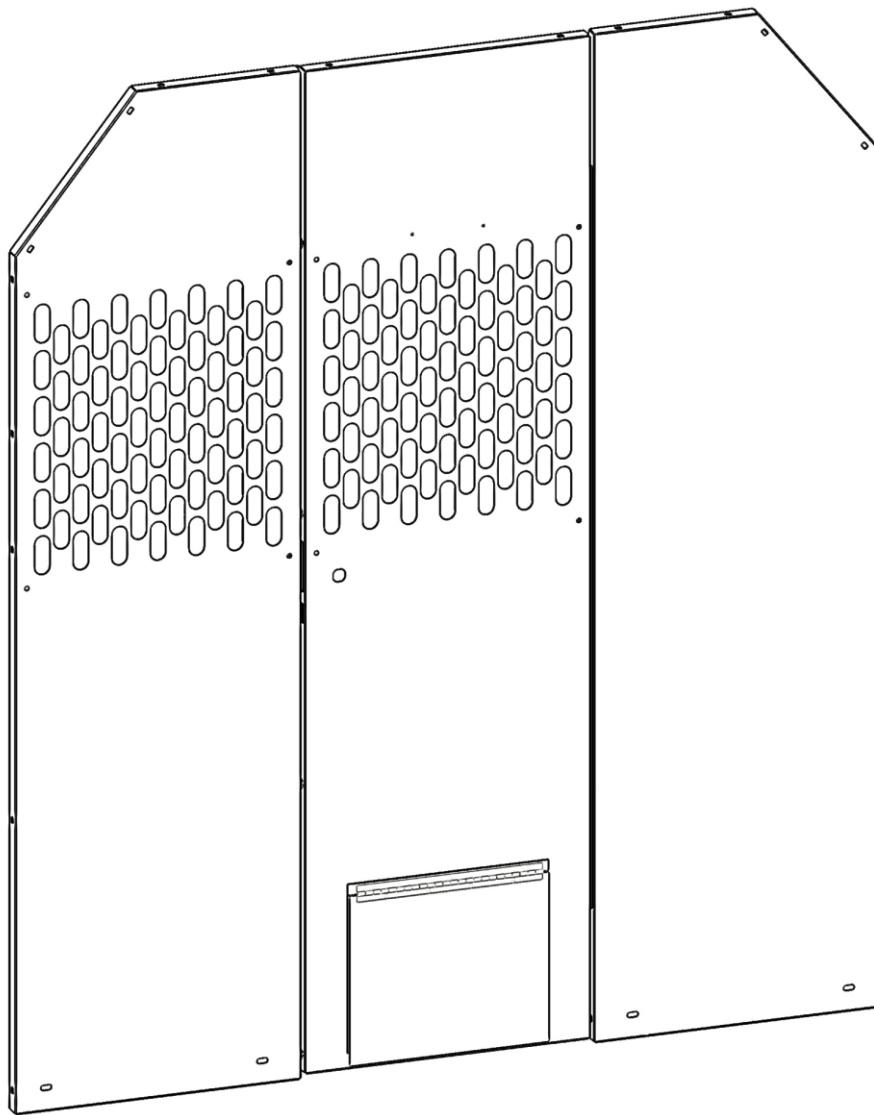

Holman

Rancho Cordova, CA 95742

800-343-7486

InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Socket and Wrench	7/16" Box Wrench
------------------------	------------------

Table of Contents

Tools Needed	1
Before You Begin	1
Parts List.....	1
Hardware	2
Join Panels	3


Before You Begin

- Read all instructions prior to installing any Holman products.
- Use vehicle specific wing kit to complete installation.
- Images in these instructions are for 40665. All instructions are the same for 40660, 40661, 40662, and 40665.



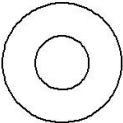
Parts List

ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
1		40660, 40662: 100761 OR 40661: 100845 OR 40665:100773	PARTITION DOOR ASSEMBLY OR SOLID PARTITION DOOR ASSEMBLY OR PARTITION DOOR ASSEMBLY W/ DOGGY DOOR	1

Parts List (Continued)


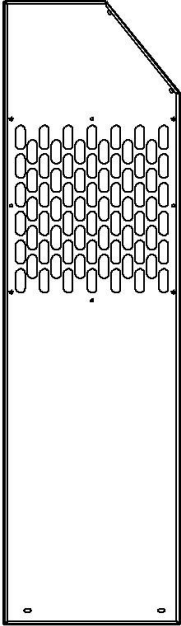
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
2		40660, 40662, 40665: 100764 OR 40661:100762	PARTITION SIDE PANEL OR SOLID PARTITION SIDE PANEL	1
3		18-40600	ASSEMBLY HARDWARE KIT	1

Hardware

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11126953	1/4"-20 X 5/8" FLANGED HEX HEAD	4
2		0167030	1/4"-20 FLANGED LOCK NUT	4
3		33078	1/4" FLAT WASHER	8

Join Panels

- Place both partition door assembly and partition side panel flat on the ground or table. **Be sure to have the flanges facing upward so you can access the bolt holes.**
- Bolt together using a 1/4" x 5/8" flanged hex bolt, 1/4" flat washers, and a 1/4" flanged lock nut. Be sure to insert the two 1/4" flat washers in between the door assembly and side panel. This is used to get correct spacing.
- Snug tighten but allow movement.
- Repeat 3 more times as shown. Be sure to insert the washers between the panels if needed.
- It may be helpful to leave bolts snug tight to allow movement until partition is installed into vehicle.

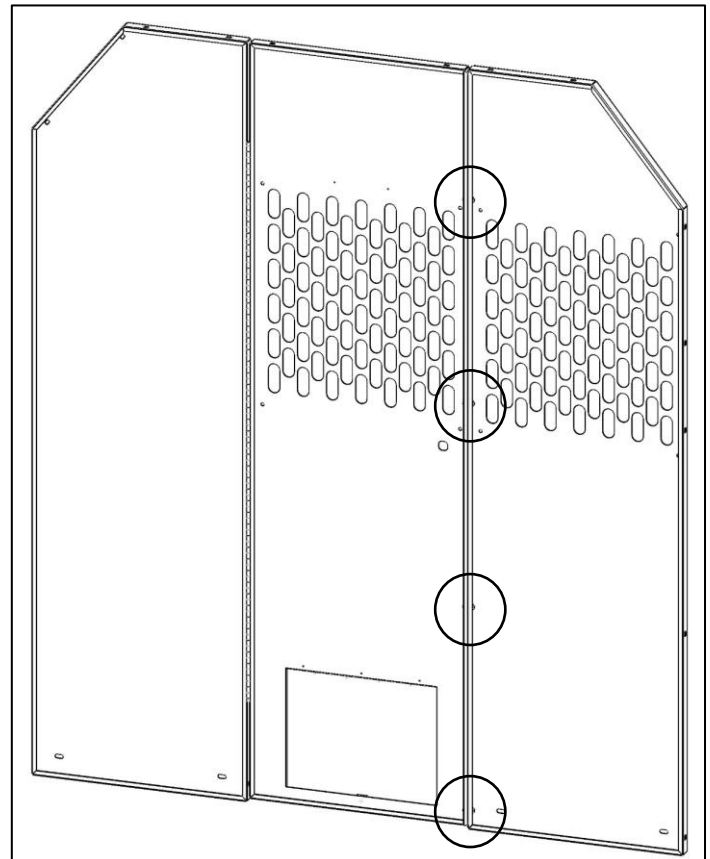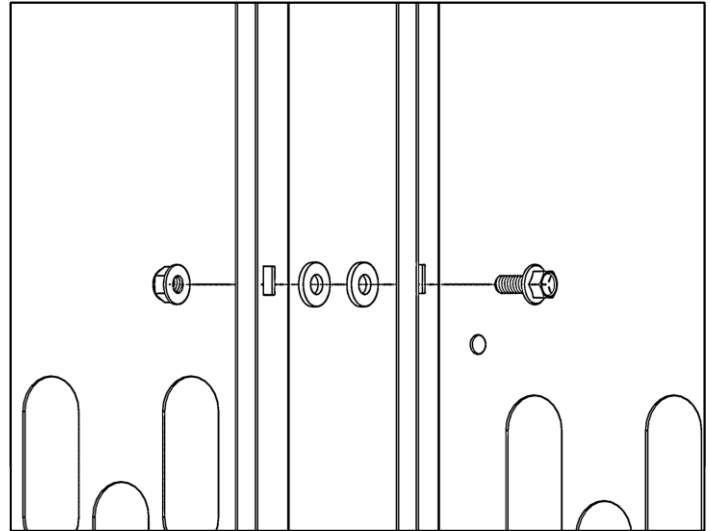

**FOLLOW INSTRUCTIONS OF
DESIRED WING KIT TO
INSTALL INTO VEHICLE.**

ASSEMBLY IS COMPLETE.