


VAN TYPE OR BRAND	DESCRIPTION	PERFORATED PARTITION	PERFORATED CENTER PARTITION	SOLID PARTITION	DOG DOOR PARTITION	WING KIT
<b>COMPACT CARGO VANS</b>						
	Steel Panel Partition	40670	N/A	40671	N/A	N/A
	Wire Partition	40680	N/A	N/A	N/A	N/A
<b>FORD</b>						
	Transit Low Roof	40640	N/A	40641	40645	40649TL
	Transit Mid Roof	40660	40662	40661	40665	40669TM
	Transit High Roof	40660	40662	40661	40665	40669TH
<b>GM</b>						
	GMC Savana & Chevy Express	40640	N/A	40641	40645	406GM
<b>METRIS</b>						
	Metris	40640	N/A	40641	40645	4064M
<b>PROMASTER</b>						
	Low/High/Super High Roof	40651	40653	40652	40655	4064P
<b>SPRINTER</b>						
	Standard Roof	40651	40653	40652	40655	406SL
	High Roof	40660	40662	40661	40665	40669SH

**PARTITION TYPES**

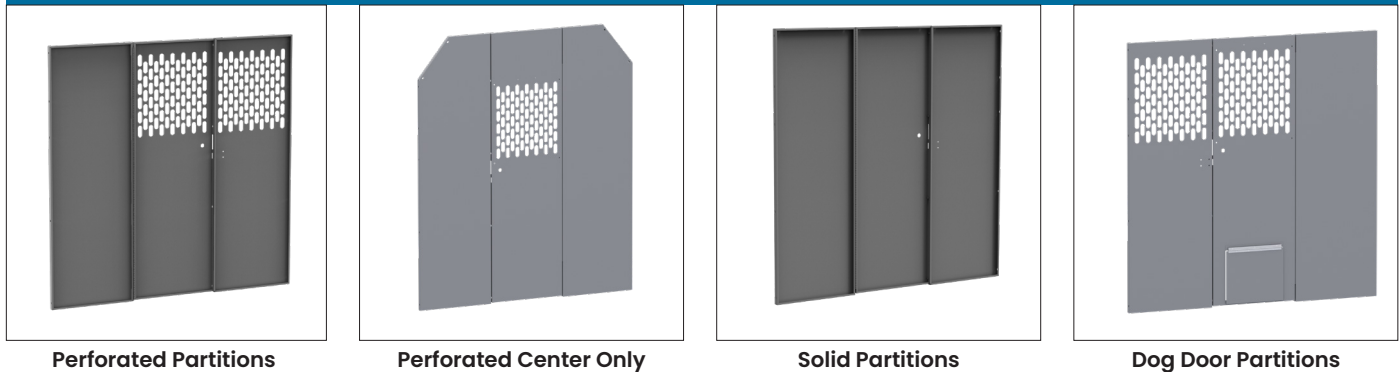

**Perforated Partitions**

**Perforated Center Only**

**Solid Partitions**


**Dog Door Partitions**

**PARTITION TYPES**




**Wire Partitions**

**WING KITS**

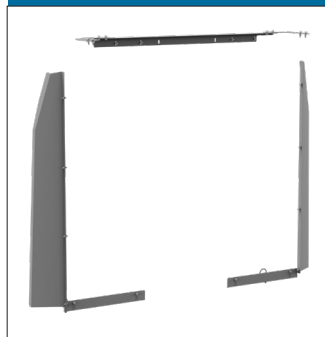

**WING KIT**  
Unless otherwise indicated, all partitions require a wing kit

**PARTITION ACCESSORIES**

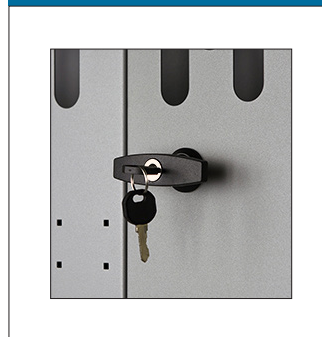

**40620 CENTER PANEL LATCH & DOOR LOCK KIT**  
For all vans with pass-through partitions



**40644 & 40654**  
Polycarbonate See-Through Panels help keep your cab cool or warm (Use with 4064X or 4065X Partitions)