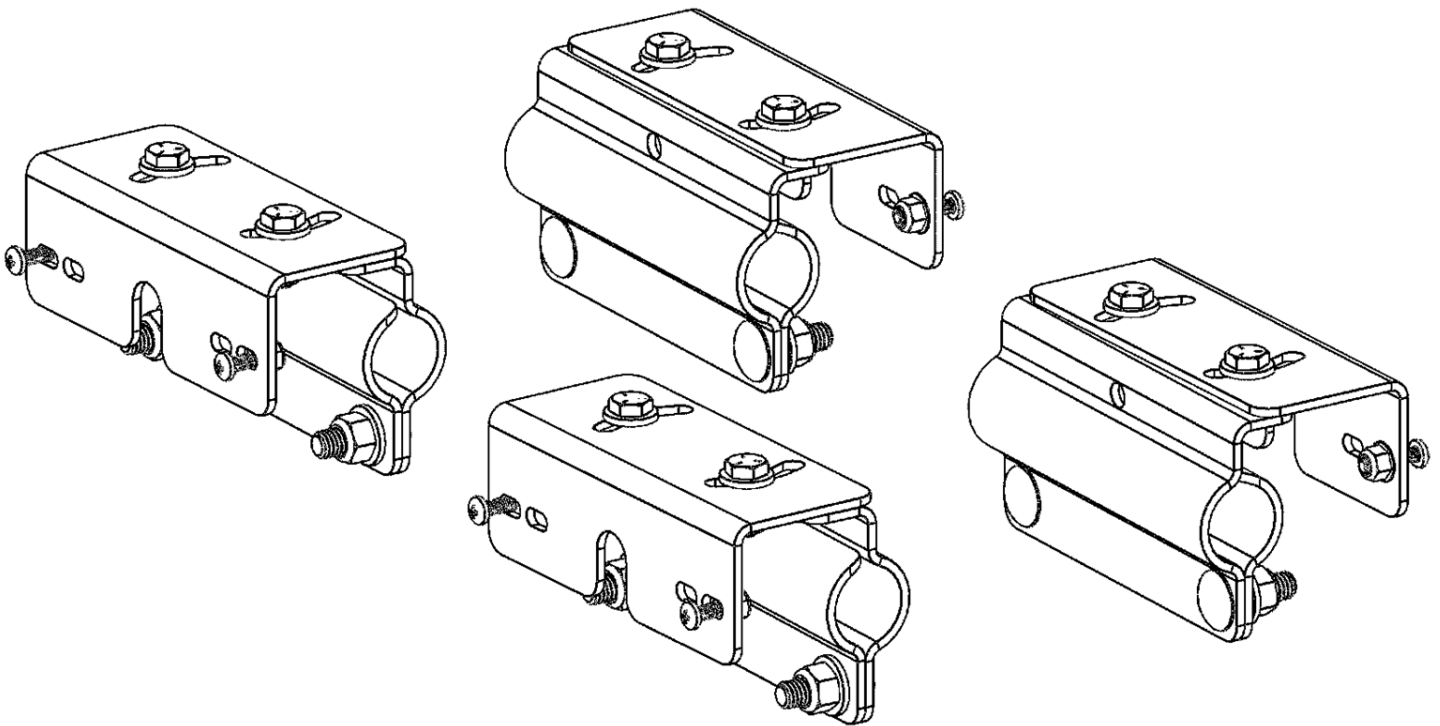


# Holman

---

## Instruction Guide 12920

---



---

Holman  
Rancho Cordova, CA 95742  
800-343-7486

[InstallationSupport@Holman.com](mailto:InstallationSupport@Holman.com)

## PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

### Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

### Table of Contents

Tools Needed .....	1
Before You Begin .....	1
Parts List.....	2
Hardware .....	2
Step 1 – Install Lower Strobe Light Brackets and Clamps to Rack .....	3
Step 2 – Install Upper Light Bracket .....	3
Step 3 – Install Lights on the Upper Bracket.....	4

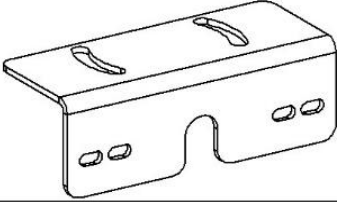
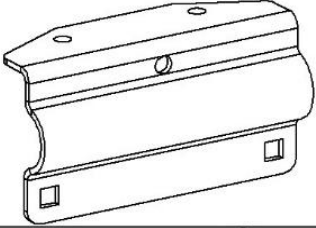
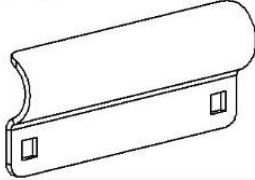
### Tools Needed

7/16" and 1/2" Socket and Wrench	#2 Phillips Screwdriver
----------------------------------	-------------------------

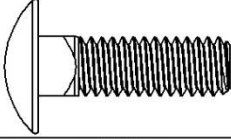
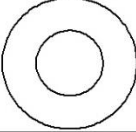







### Before You Begin

- Read all instructions prior to assembling or installing any Holman product.
- **Always locate your installation locations prior to performing any work.**
- **ENSURE SAFETY WHILE INSTALLING OR DRILLING INTO VEHICLE.**
- **This kit includes only the brackets, lights will need to be purchased separately. This kit is designed to be used with 40424.**

## Parts List

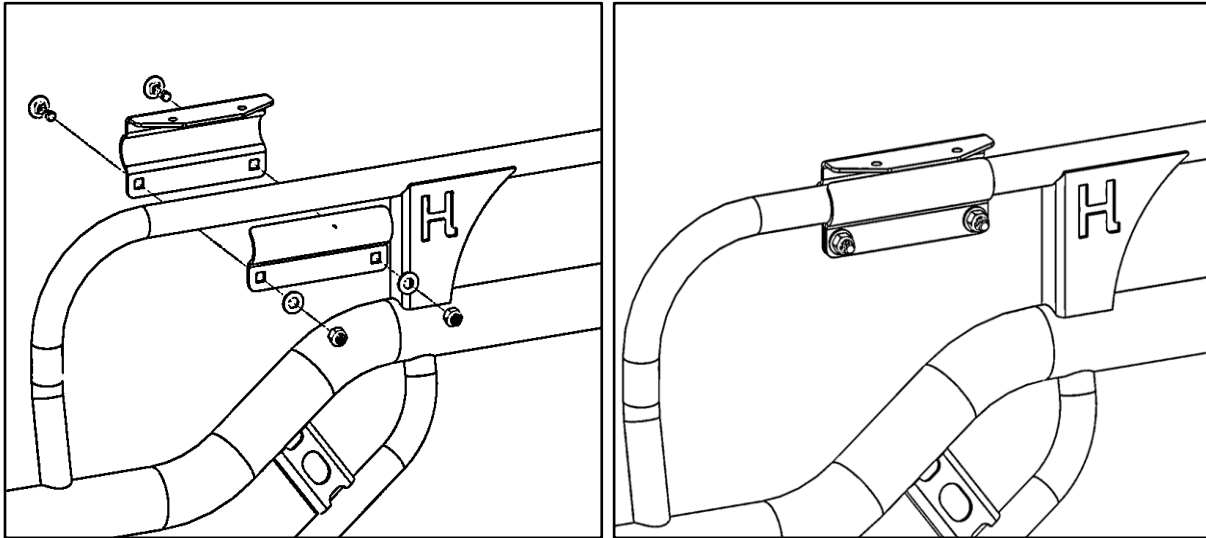
NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		101969	LIGHT BRACKET - UPPER	4
2		101826	LIGHT BRACKET - LOWER	4
3		101827	STOBE LIGHT CLAMP	4
4		18-12920	HARDWARE KIT	1

## Hardware

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		21811	5/16-18 X 1" CARRIAGE BOLT	8
2		33006	5/16" FLAT WASHER	8
3		37521	5/16"-18 LOCK NUT	8
4		13003	1/4"-20 X 3/4" HEAD HEAD BOLT	8
5		33078	1/4" FLAT WASHER	16
6		37018	1/4"-20 NYLON INSERT LOCK NUT	8
7		28891	8-32 PAN HEAD PHILLIPS SCREW	8
8		0159718	#8 FLAT WASHER	8
9		37499	8-32 NYLON INSERT LOCK NUT	8

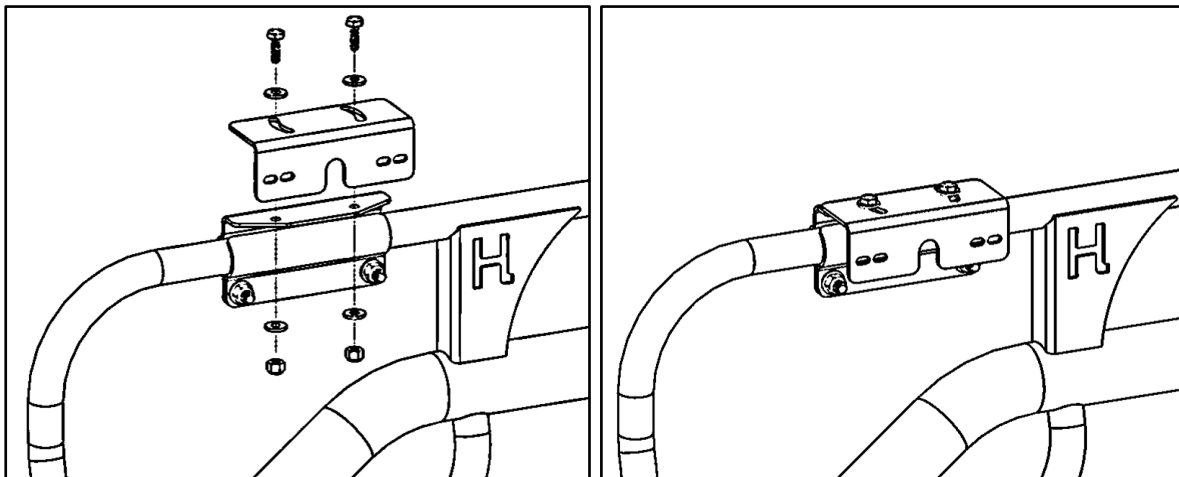
## Step 1 – Install Lower Strobe Light Brackets and Clamps to Rack

- Using two 5/16 x 1" carriage bolts, two 5/16" flat washer, and two 5/16" lock nuts, bolt through the lower strobe light bracket and strobe light clamp to attach them to any 1" tube on the rack.
- Repeat for the three remaining sets of strobe light brackets and strobe light clamps.

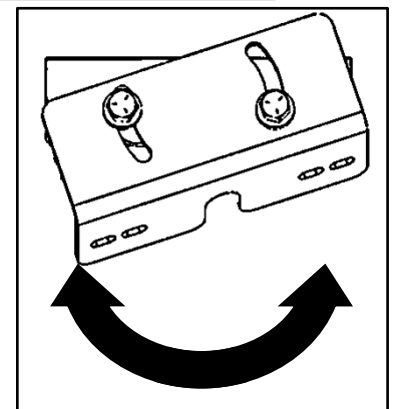


## Step 2 – Install Upper Light Bracket

- Using two 1/4" x 3/4" hex head bolts, four 1/4" washers, and two 1/4" lock nuts, loosely fasten the upper light bracket to the previously installed lower bracket. **Be sure to leave the hardware loose enough to adjust the angle of the upper bracket to the desired position.**



- These light brackets are designed to allow each light to be angled as desired. This allows for light visibility from all angles if configured correctly.
- Set the upper light bracket to the desired angle then tighten the previously installed hardware.
- Repeat for the three remaining strobe light brackets.



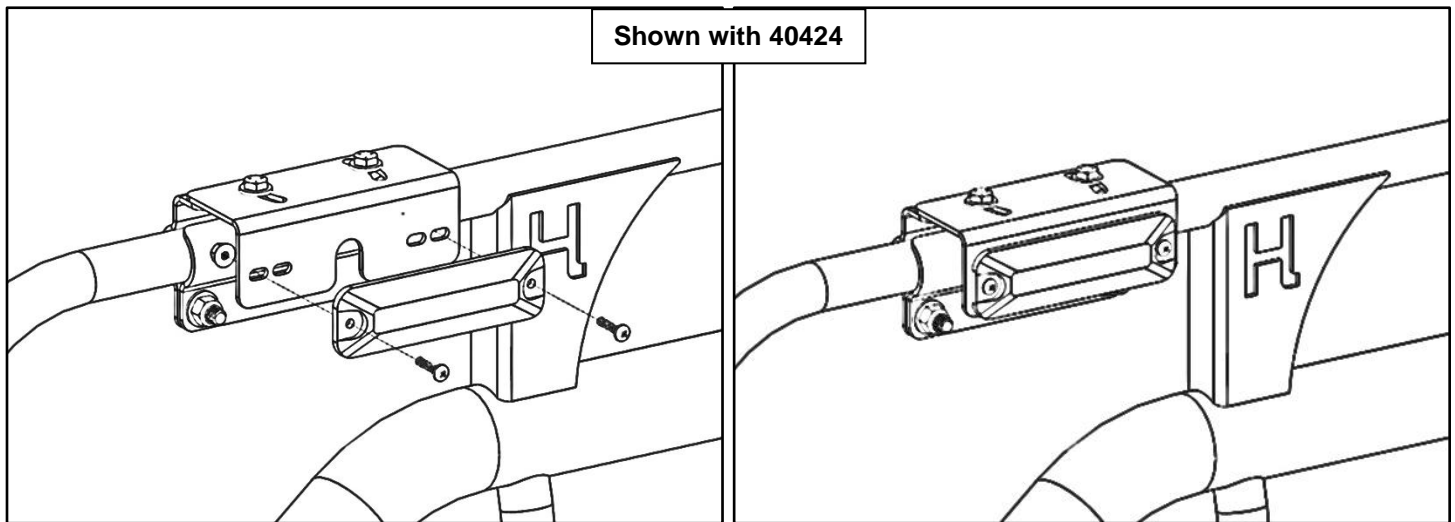
## **Step 3 – Install Lights on the Upper Bracket**

**NOTE:** Lights (40424) are not included with this kit and must be purchased separately.

- Using two 8-32 pan head screws, two 8 flat washers, and two 8-32 flange lock nuts, attach the light to the upper light bracket as shown.

**NOTE:** There are additional mounting slots on the bracket to allow for installation of different lights.

- Repeat for the three remaining strobe light brackets.



**GO BACK AND TIGHTEN ALL HARDWARE.**

**INSTALLATION IS COMPLETE.**

