


Holman

Instruction Guide 40051

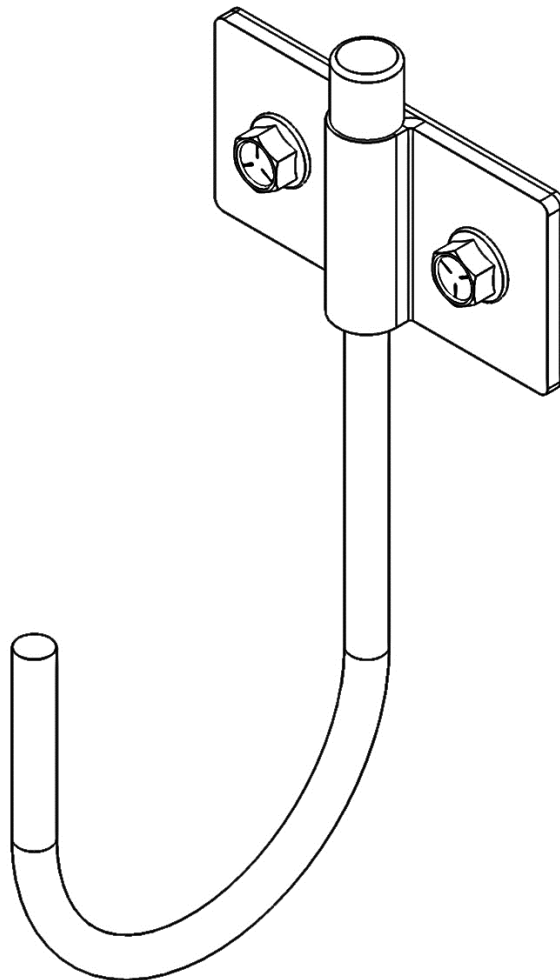

Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Table of Contents

Tools Needed	1
Before You Begin	1
Parts List.....	1
Hardware	2
Step 1 – Find Location for Swivel Hook.....	2
Step 2 – Install Hook	2

Tools Needed


1/2" Socket and Socket Wrench	Drill & 3/8" Drill Bit
-------------------------------	------------------------

* Sold Separately.




Before You Begin

- Read all instructions prior to assembling or installing any Holman product.
- **ENSURE SAFETY WHILE INSTALLING OR DRILLING INTO VEHICLE.**

Parts List

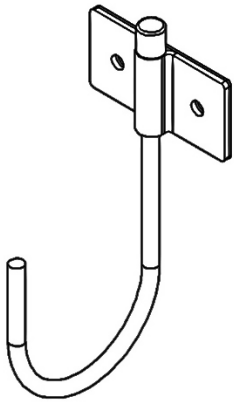
NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		102510	Hook Assembly	1
2		18-40051	Single Swivel Hardware	1

Hardware

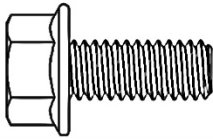NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		312-18 X .75 FHH	5/16"-18 X 3/4" FLANGED HEX HEAD	2
2	 	GRADE 5	5/16-18 FLANGED NYLOCK NUT	2


Step 1 – Find Location for Swivel Hook

- Place hook in desire location.
- Mark through both holes. Remove mount base and drill with 3/8" drill.

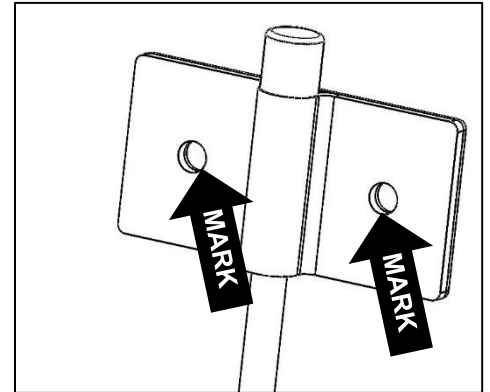

Step 2 – Install Hook

- Place hook over previously drilled holes.
- Using 5/16" x 3/4" flanged hex head and 5/16" flanged lock nut bolt hook to mount location.

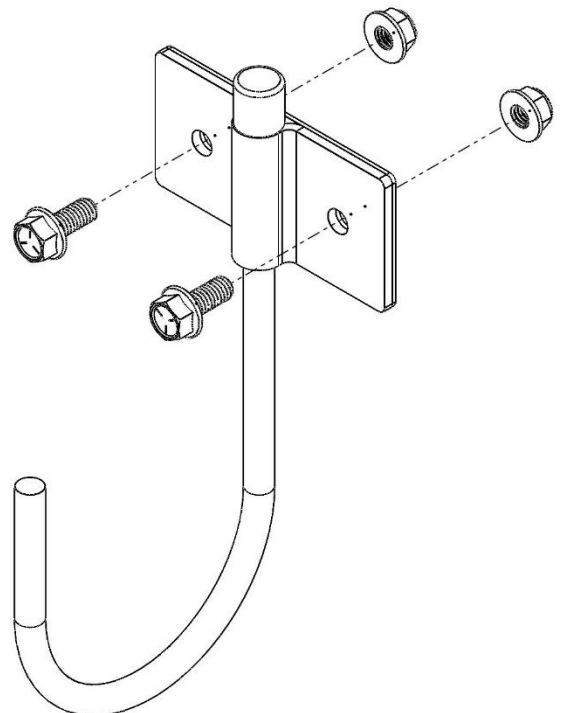

**GO BACK AND TIGHTEN ALL
HARDWARE.**
INSTALLATION IS COMPLETE.