


Holman

Installation Guide

40160

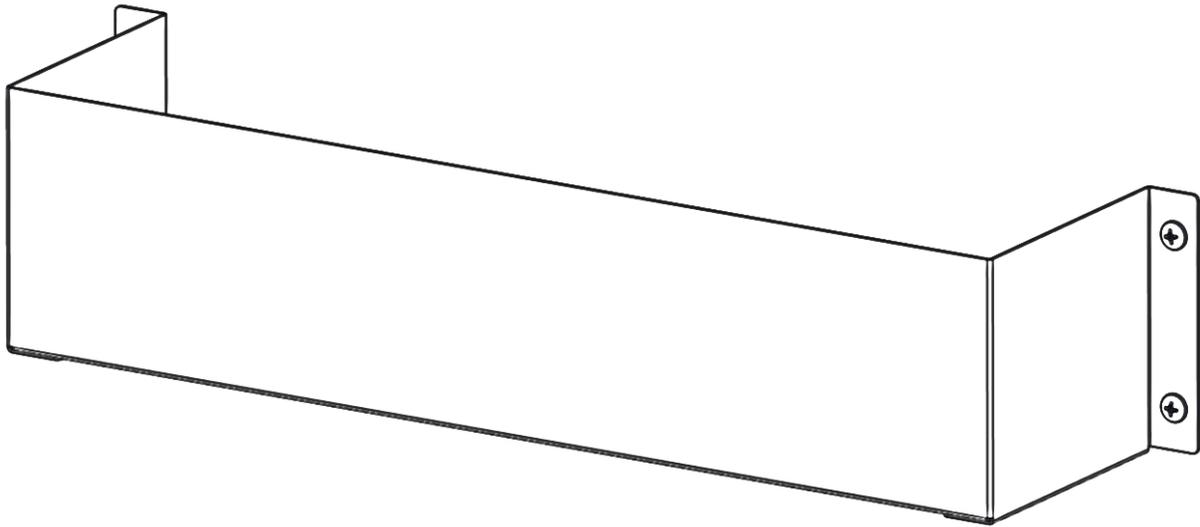

Holman
Rancho Cordova, CA 95742
800-343-7486

InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

Phillips Driver	3/8" Wrench and Socket
9/32" Drill Bit	

Table of Contents

Parts 1

Hardware 2


Step 1 – Find Location, Drill Holes 2

Step 2 – Install Reflector Holder..... 2

Before You Begin

- Read all instructions.
- Have partition installed and ready for reflector holder.
- **ENSURE SAFETY BEFORE DRILLING OR CUTTING.**

Parts

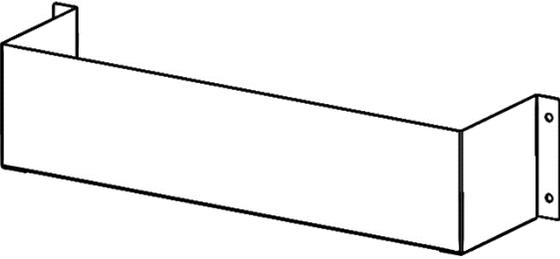
ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
A		40160-00-001	Reflector Holder-Horizontal	1
		18-40160	Reflector Holder-Hardware	1

Hardware

ITEM NO.	TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		90272A537	1/4"-20 x 1/2" Phillips Pan Head Screw	4
2		93298A110	1/4"-20 Flanged Nyloc	4


Step 1 – Find Location, Drill Holes


- Position reflector holder in desired location for mounting.
- Press firmly against partition unit. The holder must go on inside of the cab area.
- A sample location is shown. Find most convenient location for your needs.
- Mark hole in each corner for a total of four times.
- Remove reflector holder.
- Measure from a reference point to ensure the holes are marked in a square orientation.
- Drill using a 1/4" bit.

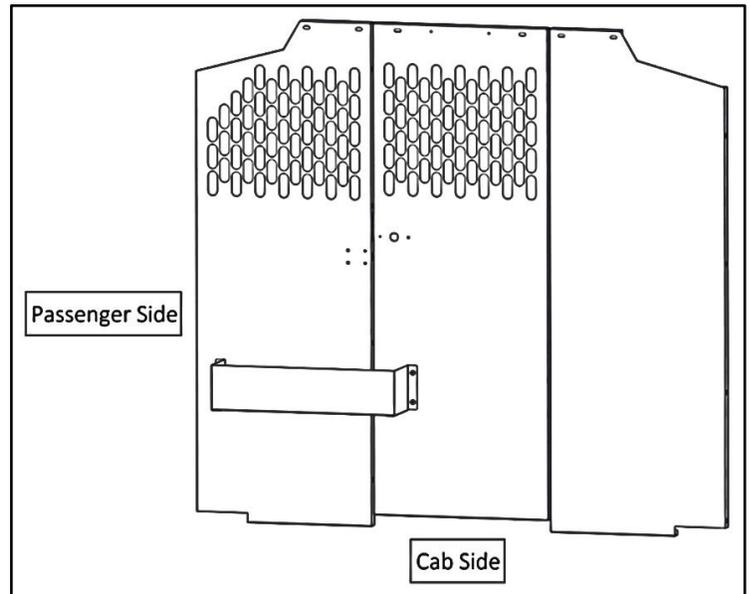

Step 2 – Install Reflector Holder

- Place reflector holder over previously drilled holes.
- Bolt using a 1/4" X 1/2" pan head and a 1/4" flanged lock nut.
- TIGHTEN.

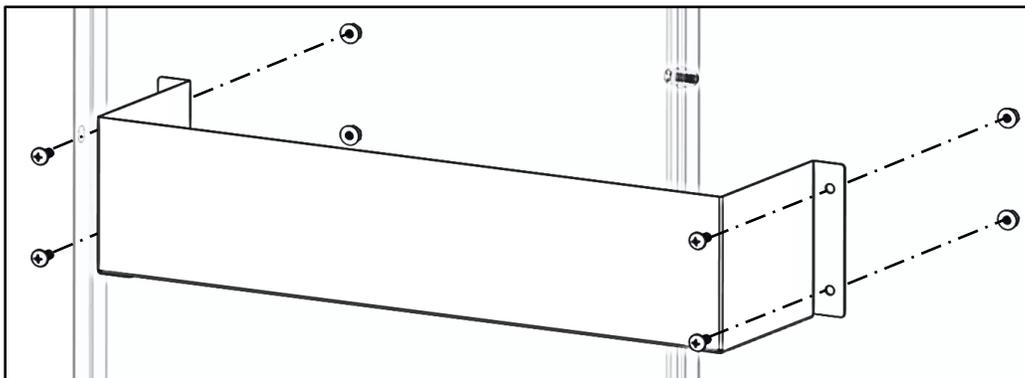

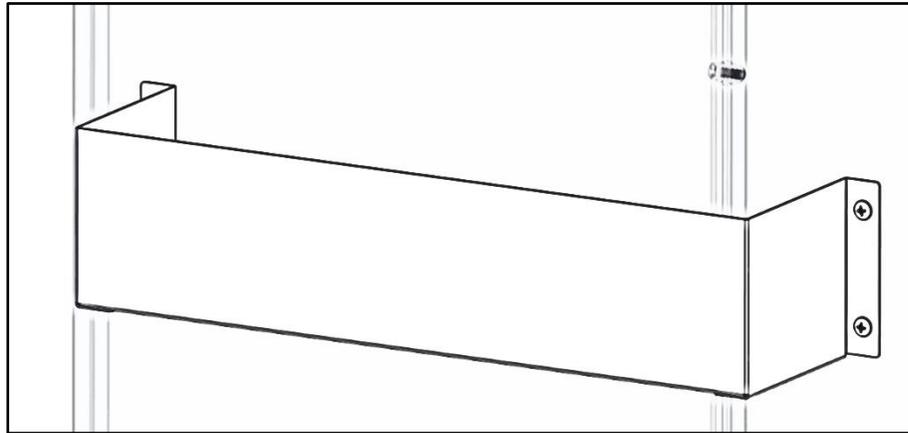

Square and align to your liking.

Tighten all bolts from previous steps.

Your installation is now complete.

