


# Holman

---

## Instruction Guide 40221

---

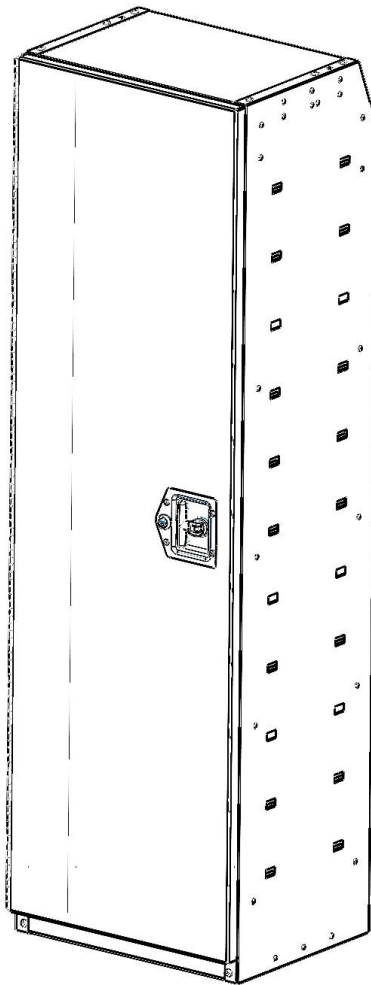

---

Holman  
Rancho Cordova, CA 95742  
800-343-7486  
[InstallationSupport@holman.com](mailto:InstallationSupport@holman.com)

---

## PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

### Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

### Tools Needed

Phillips head #2 screwdriver	7/16" Box wrench
Flat head screwdriver	





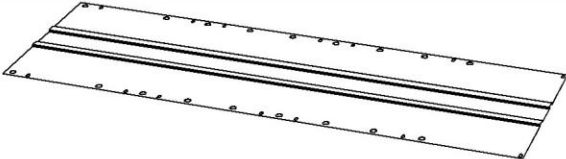

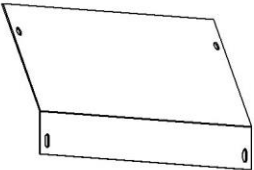
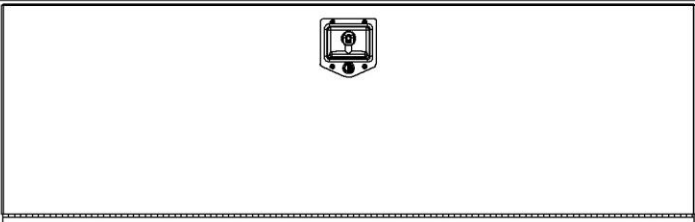
### Table of Contents

Parts List.....	2
Hardware .....	3
Step 1 – Install Locker Bottom.....	3
Step 2 – Install Middle Shelf .....	4
Step 3 – Install Right Side Panel .....	6
Step 4 – Attach Back Panel .....	7
Step 5 – Install Door .....	7
Step 6 – Install Top Panel.....	8
Step 7 – Install Locker Top Rear Panel .....	9
Adjustment Instructions .....	10





### Before You Begin

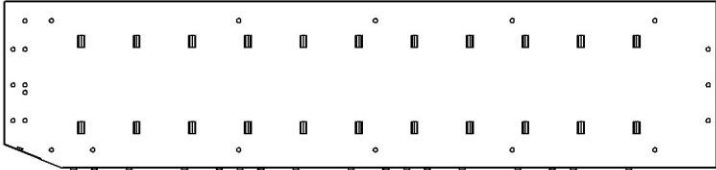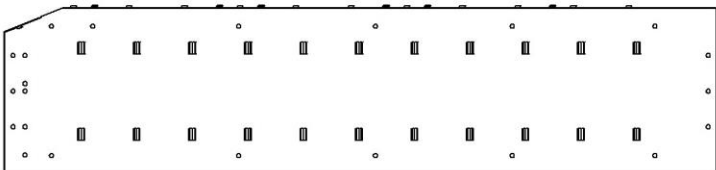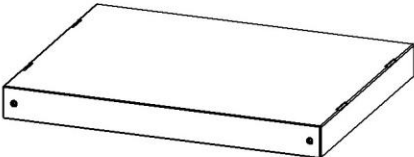- Read all instructions prior to assembling or installing any Holman product.
- **Always locate your installation locations prior to performing any work.**
- Door can be installed to left or right. **Be sure of orientation prior to assembly.**
- **ENSURE SAFETY WHILE INSTALLING OR DRILLING INTO VEHICLE.**

## Parts List


NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		48060-10	60"H SIDE ASM	1
2		Mirror48060-10	60"H LH SIDE ASM	1
3		100557	18" SHELF ASSEMBLY	3
4		100564	LOCKER BOTTOM ASSEMBLY	1
5		100561	60" LOCKER REAR PANEL	1
6		100565	LOCKER TOP PANEL ASSY, 18" W	1
7		100706	LOCKER TOP REAR PANEL	1
8		100558	LOCKER DOOR ASSY, 60" H X 18" W	1
9		4863	TALL SHELF MOUNT KIT	1
10		18-40221	Assembly Hardware	1

## Hardware

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		29161	1/4"-20 x 1/2" Phillips Machine Screw	23
2		0167030	1/4"-20 FLANGED LOCK NUT	10
3		90287A848	1/4"-20 x 3/8" ONE WAY SCREW	8
4		90403A535	1/4"-20 x 3/8" PAN HEAD SCREW, INTERNAL TOOTH WASHER	14


## Step 1 – Install Locker Bottom

- Flatten box top and lay out on workbench to protect shelf from scratches during installation.
- Lay left side panel flat on workbench and insert bottom pan into side panel.
- Using two 1/4" x 1/2" machine screws, install the locker bottom assembly to the side panel.


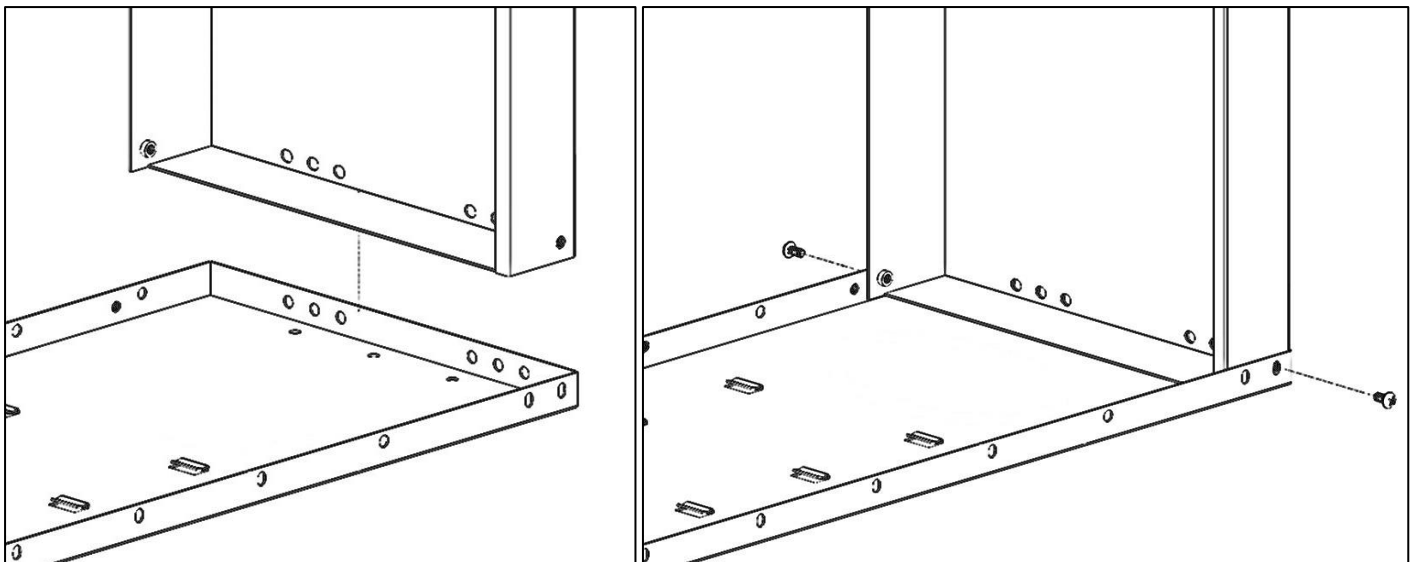


## Step 2 – Install Middle Shelf



**Note: DO NOT install a shelf in the sixth shelf position from the bottom. A shelf installed in this position will not allow the door to close properly.**

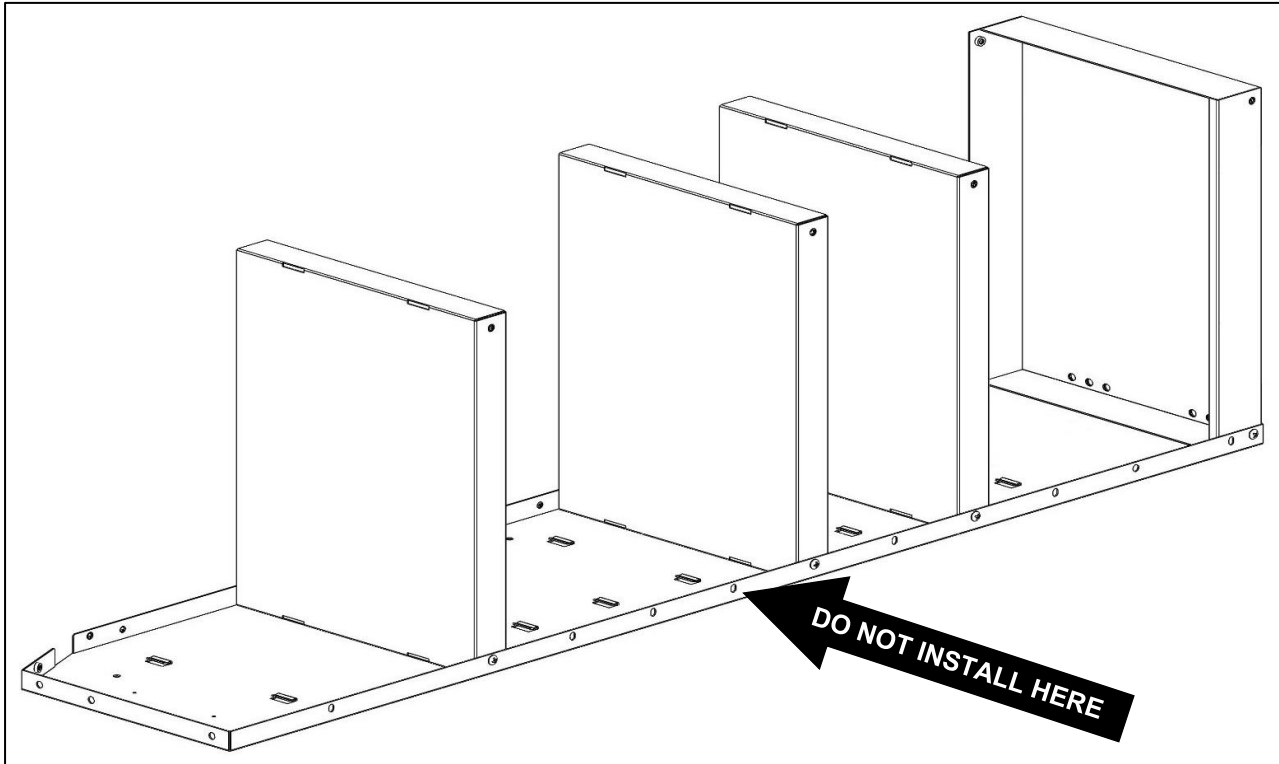


- Shelves can be assembled with flanges pointing up to retain shelf contents, or flanges pointing down to allow the installation of drawer cabinets. **Decide which option you want for each shelf before attaching it to the sides.** The beveled corner of each Shelf Side is in the back. Each shelf, the front side only has nuts pressed into the shelf flange.
- **Make sure the shelf is oriented properly (pressed-in nuts in front) and in desired location before attaching.**
- Press the shelf down firmly so that it is resting solidly and level on the lances in the shelf sides.

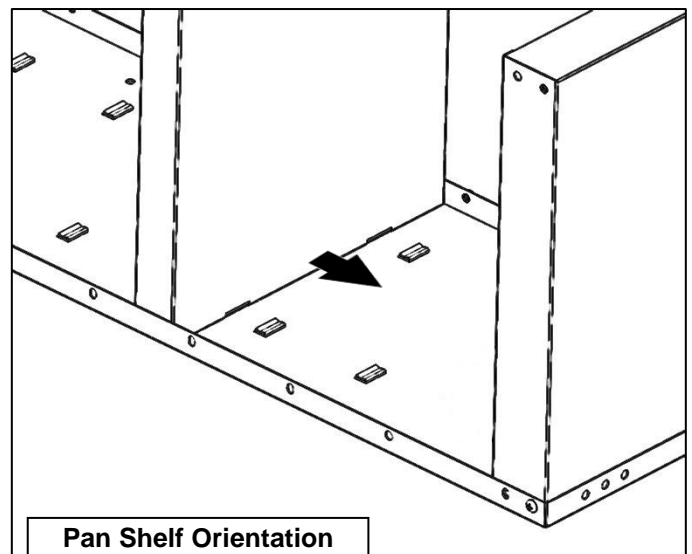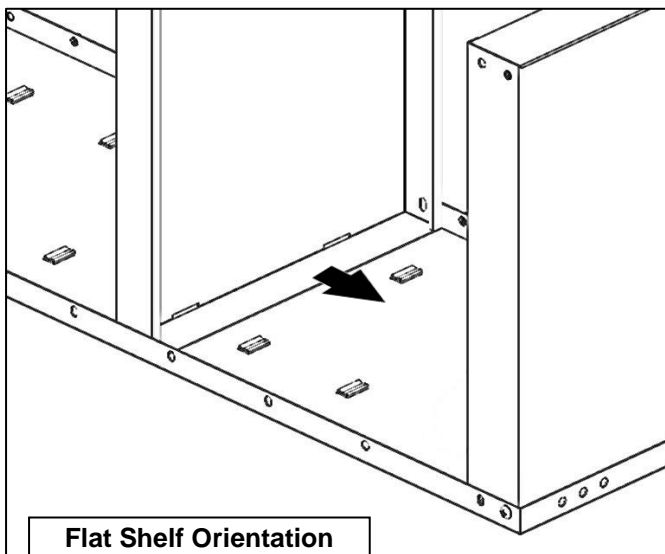

- Install one 1/4" x 1/2" machine screw through the front of the side panel into the pressed-in nut on front of shelf.

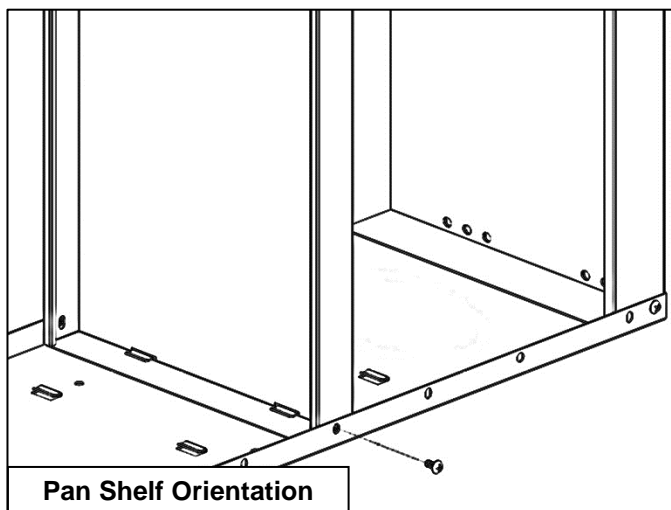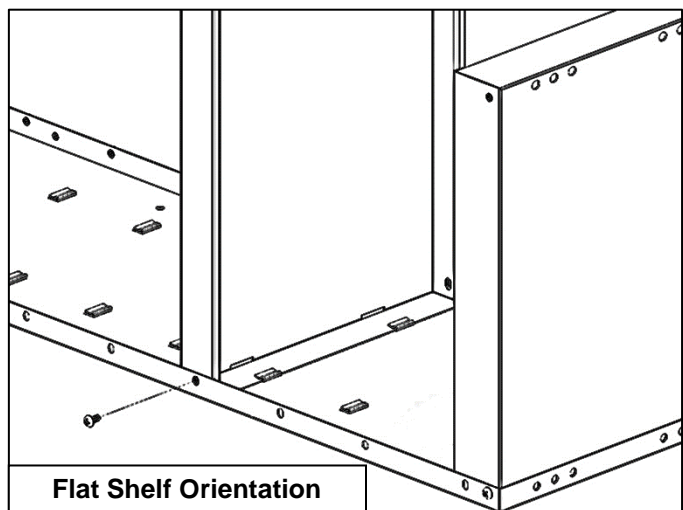


- Install one 1/4" x 1/2" machine screw through the rear of the shelf into the pressed-in nut on the rear of the shelf side.

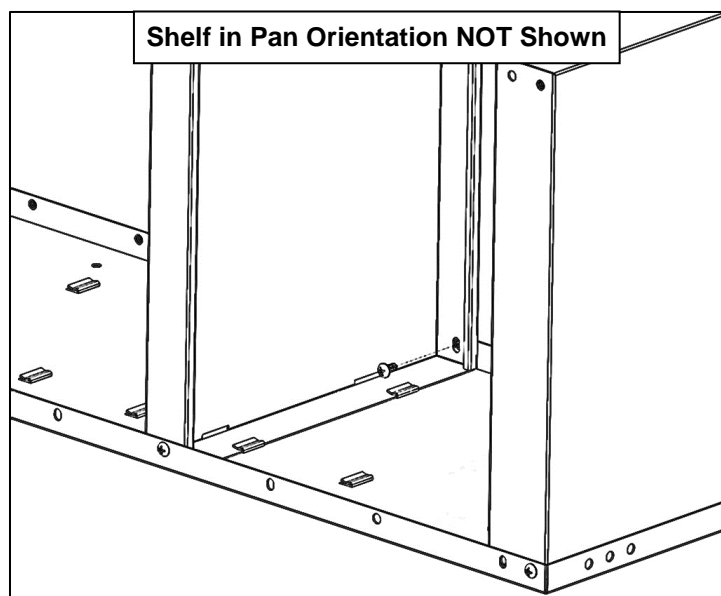

- Install remaining shelves.


## **Step 3 – Install Right Side Panel**

- Install opposite side panel to locker bottom assembly and shelves per previous directions above.

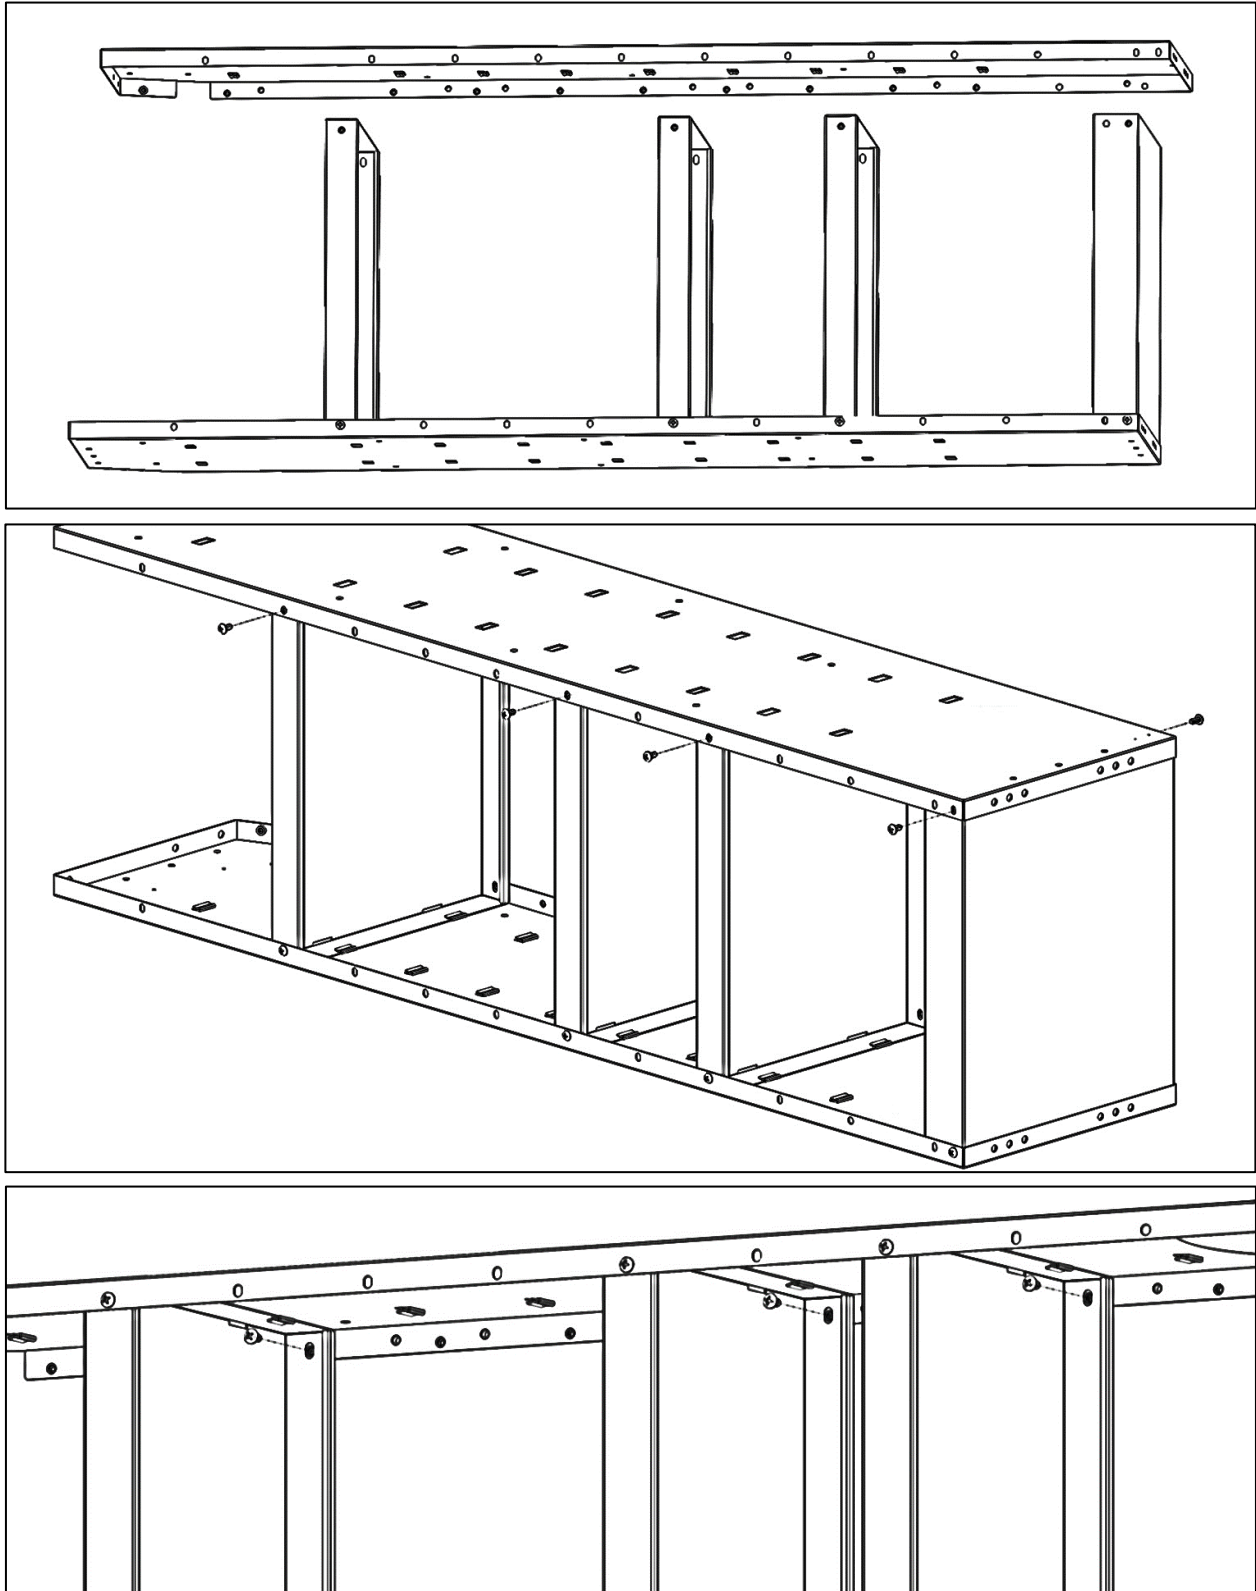

## **Step 4 – Attach Back Panel**

- Making sure the shelves are square to the side panels, install the rear panel using fourteen 1/4" x 3/8" Phillips SEMS screws.

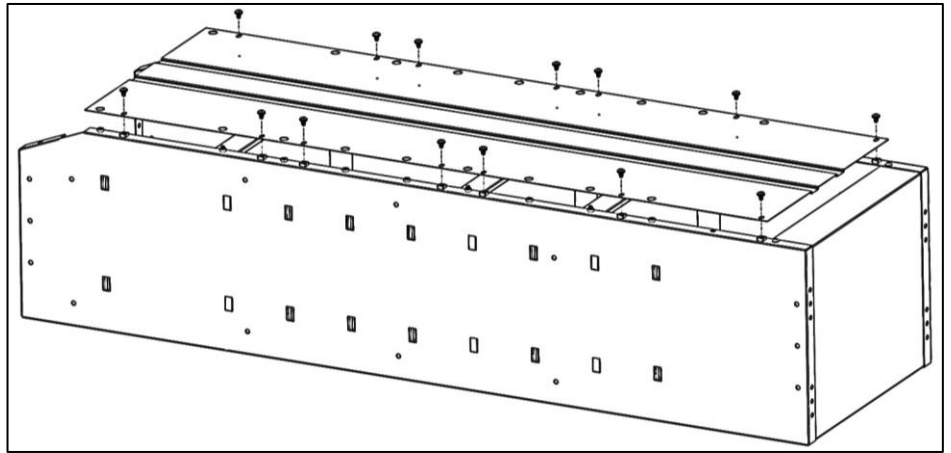


## **Step 5 – Install Door**


**Note:** The door can be installed opening left or opening right. Based upon door clearance, determine which side to install door.

- With locker laying on the side hinge will attached to, remove the 1/4" x 1/2" screw from the front of each shelf on the side the door hinge will be mounted.



**Left Opening Door Position**

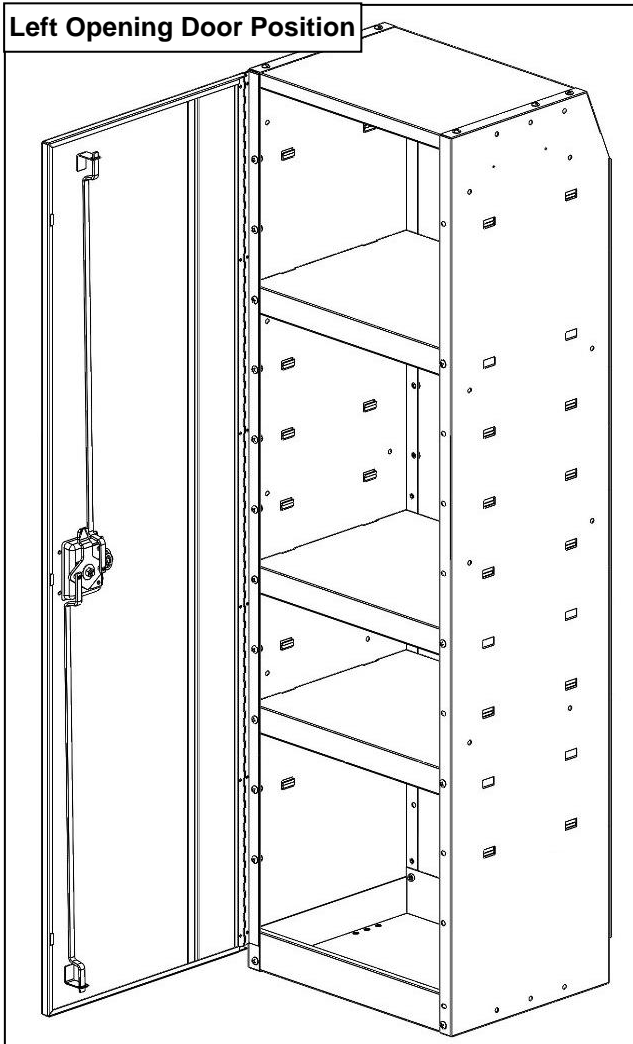

**Right Opening Door Position**

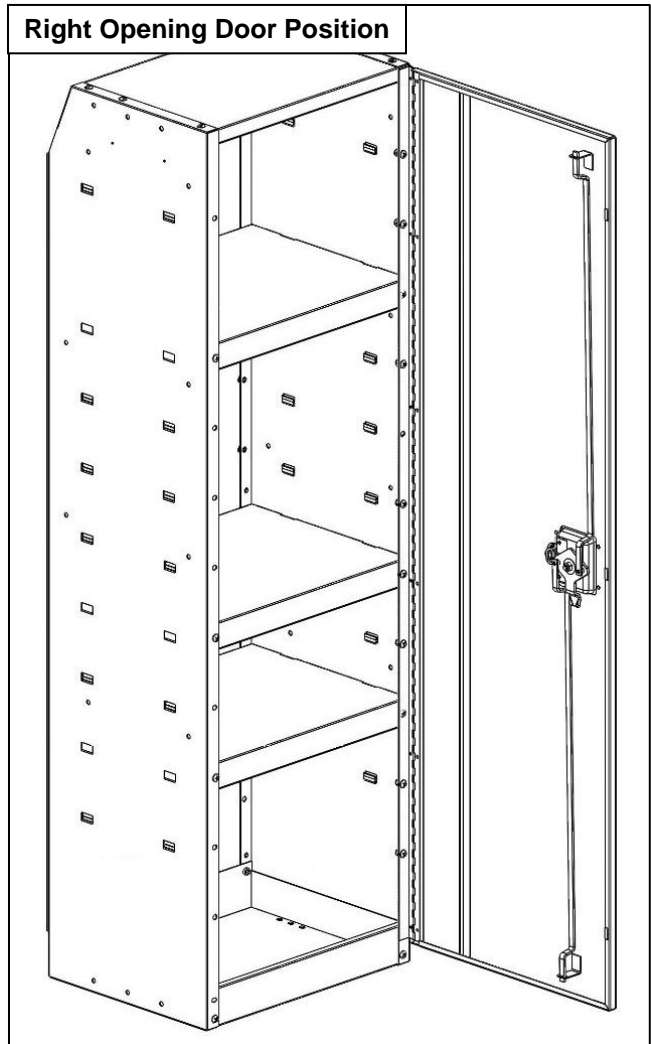


- Laying the door flat on the workspace, fasten the previously removed 1/4" x 1/2" machine screws through the door hinge into the shelves.
- Using eight 1/4" x 1/2" Phillips machine screws and eight 1/4" flanged lock nuts, install door to side panel.

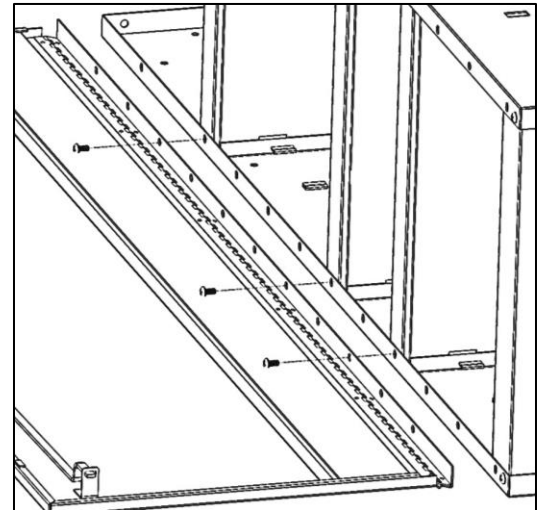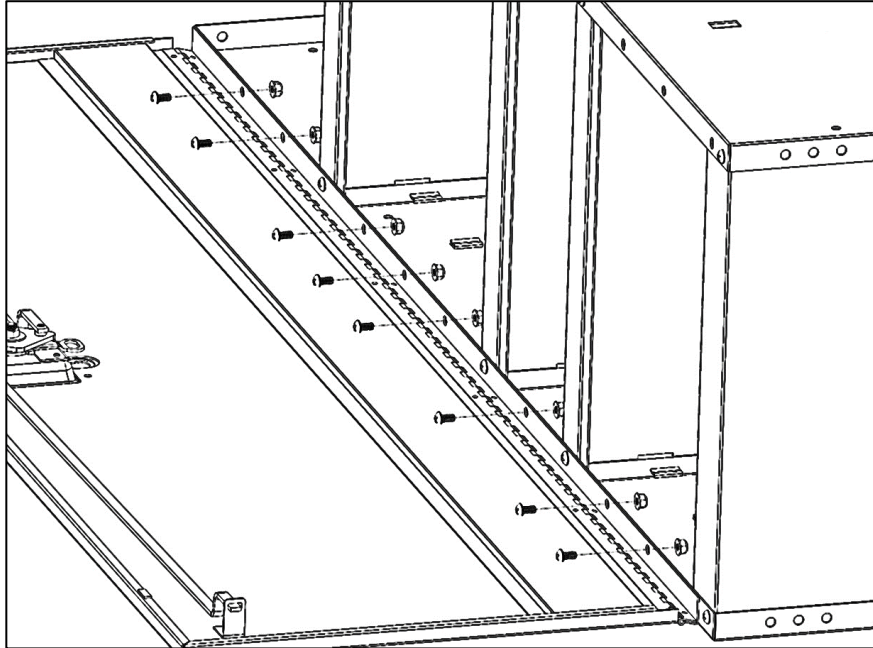



## **Step 6 – Install Top Panel**

- Install the top panel assembly using six 1/4" x 3/8" one-way screw.

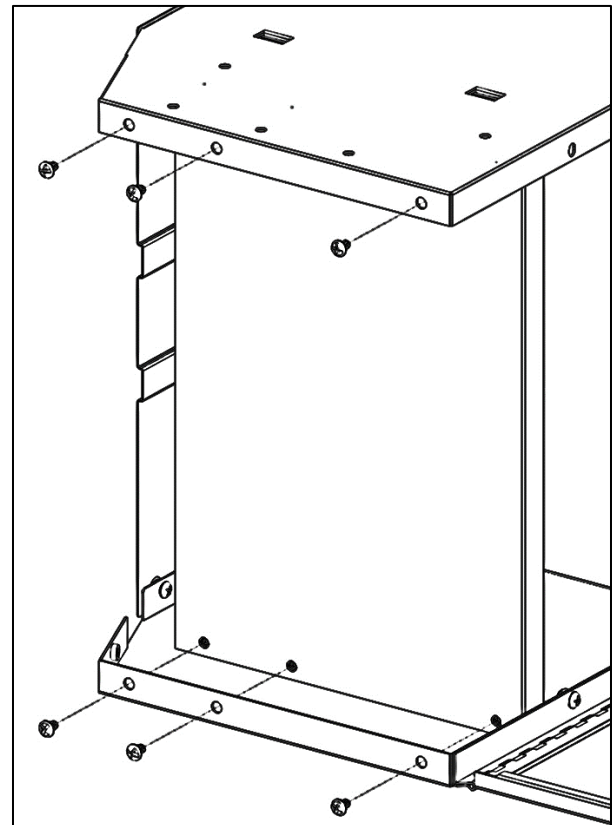


## **Step 7 – Install Locker Top Rear Panel**

- Slide the rear cover panel inside the shelf-panel rear flanges and outside the top rear shelf-panel flanges.

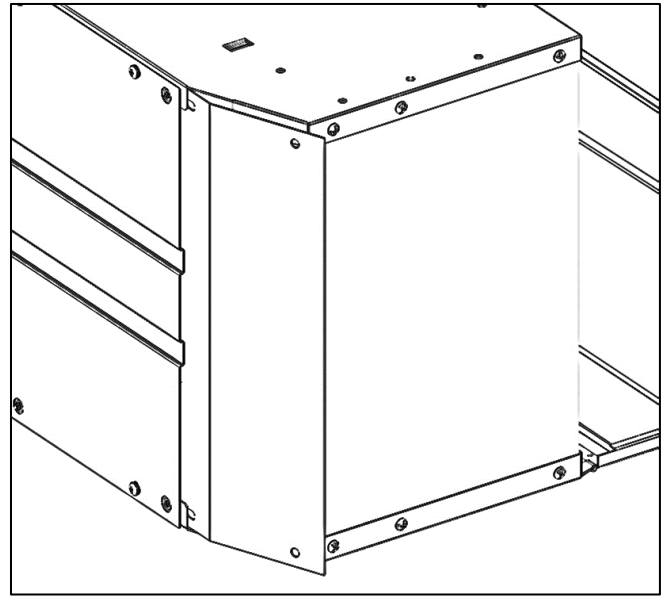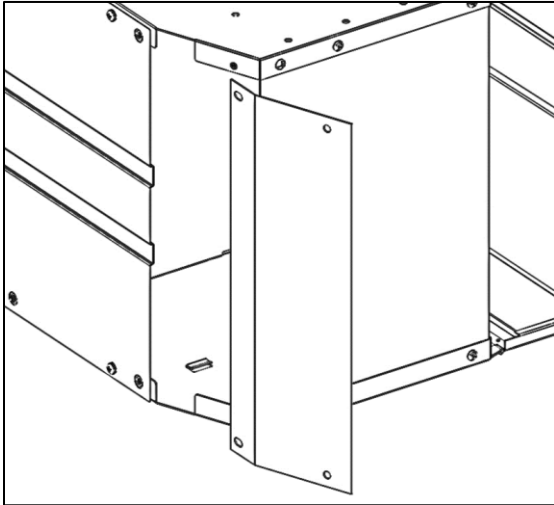


- Install rear panel to the inside of the shelf-panel rear flanges using two 1/4" x 1/2" Phillips machine screws.

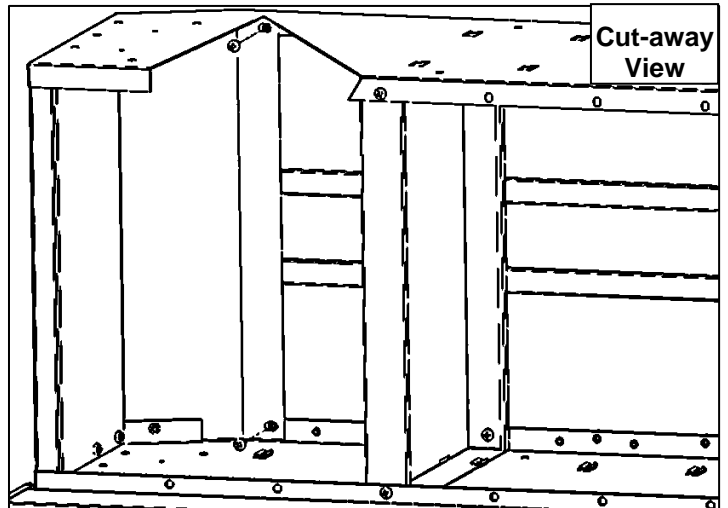

- Install two 1/4" x 3/8" one-way screws through the rear cover panel into the top rear shelf panel flanges.
- Install locker per 4863 Shelf Mounting Kit Installation Guide.

**MAKE SURE ALL HARDWARE IS  
TIGHT.**

**ASSEMBLY IS NOW COMPLETE!**

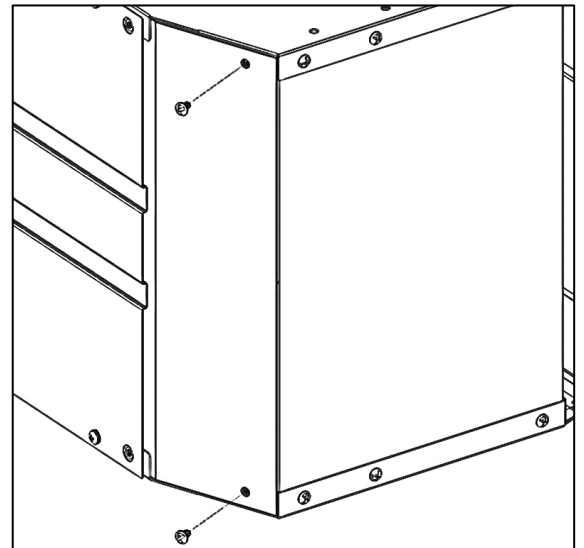

## Adjustment Instructions

- If door is out of alignment or drooping, slightly loosen screws and nuts holding door to side panel.
- Shift door up or down depending on desired adjustment.
- Tighten screws and nuts.

