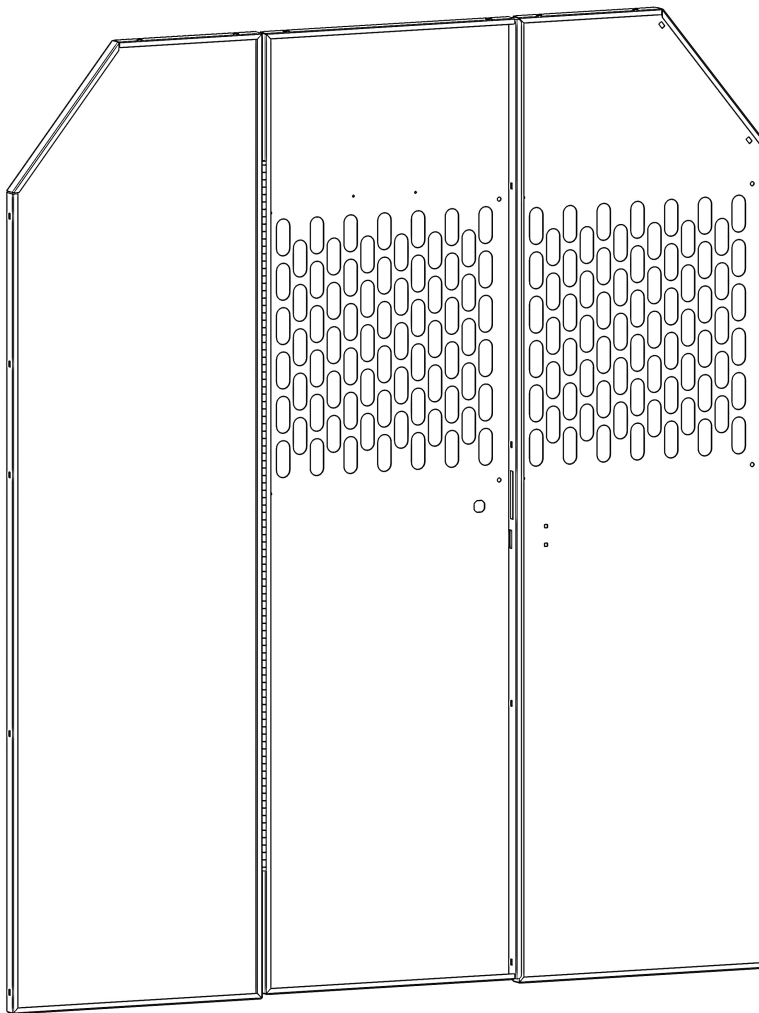


Holman

Assembly Guide 40660



Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Wrench and Socket	7/16" Wrench and Socket
------------------------	-------------------------

Table of Contents

Parts List 1

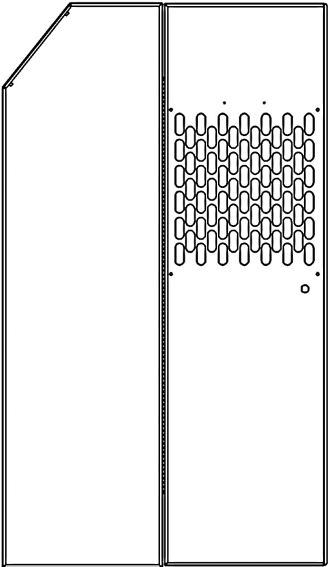
Hardware 2

Step 1 – Assemble Partition Panels 3

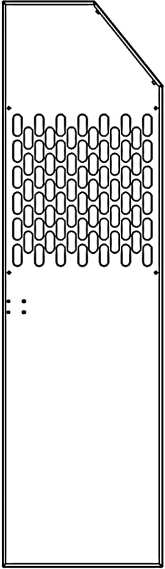
Before You Begin

- Read all instructions prior to installing or assembling any Holman product.
- Be sure to have wing kit for your van application.



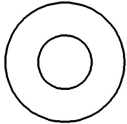
Parts List

ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		100761	PARTITION DOOR ASSEMBLY	1

Parts List (Continued)

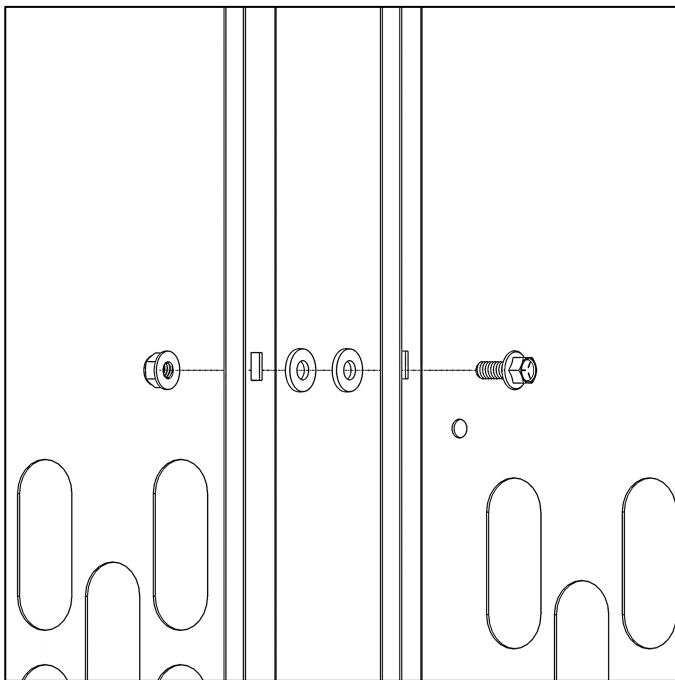
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
2		100764	Partition Side Panel	1
3		18-40600	ASSEMBLY HARDWARE KIT	1

Hardware

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11126953	1/4"-20 X 5/8" FLANGED HEX HEAD	4
2		0167030	1/4"-20 FLANGED LOCK NUT	4
3		33078	1/4" FLAT WASHER	8

Step 1 – Assemble Partition Panels

- Place both partition panels flat on the ground or table. Be sure to have the flanges facing upward so you can access the bolt holes.
- Bolt together using a 1/4" x 5/8" flanged hex bolt and a 1/4" flanged lock nut.
- If installing the Center Panel Latch & Door Lock Kit (40620), be sure to put two 1/4" flat washers in between the two panels. This is used to get correct spacing.
- If no door kit is being used, the washers between panels are not necessary.
- Snug tighten nut but allow movement.



- Repeat three more times per the locations shown. Be sure to insert the washers between the panels if the door kit is being installed.
- Leave bolts snug tight but allow movement until partition is installed into vehicle.

Follow the corresponding vehicle wing kit instructions to finish installation.

