


Holman

Instruction Guide 4089C

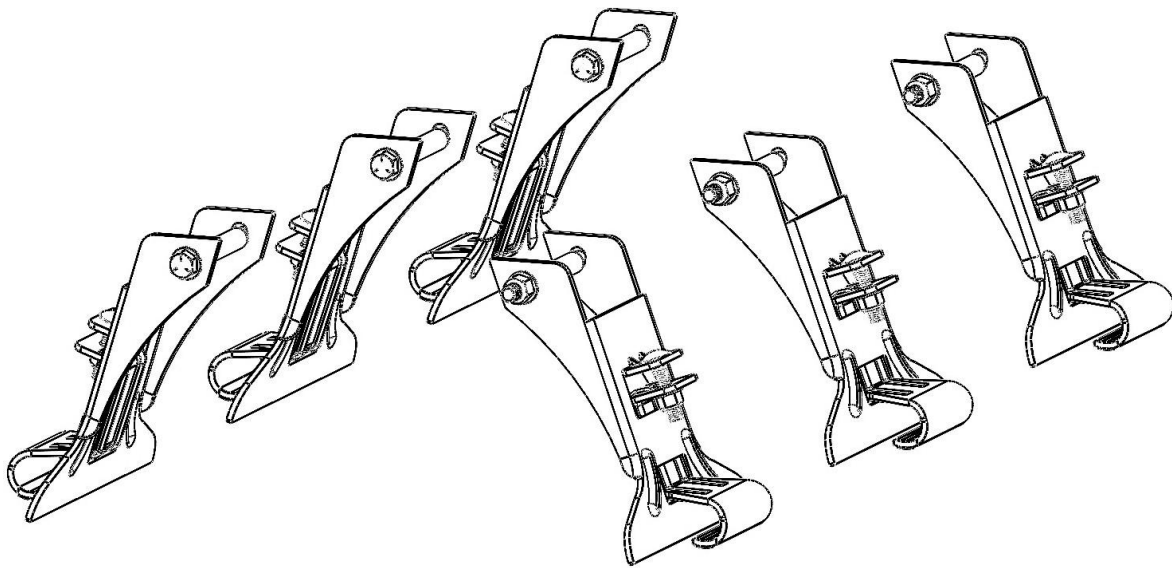

Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.



DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF.



Secure all payloads properly for safe transportation.

Table of Contents

Tools Needed	1
Before You Begin	1
Parts List.....	2
Hardware	2
Step 1 – Find Mount Locations on Roof of Van	3
Step 2 – Attach Feet to Rack.....	4
Step 3 – Install Rack with Feet	5



Tools Needed

1/2" Socket and Wrench	9/16" Socket and Wrench
Tape Measure	




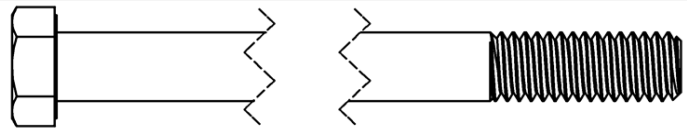
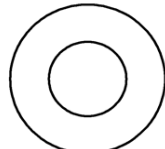


Before You Begin

- Read all instructions prior to assembling or installing any Holman product.
- Follow assembly instructions found with the rack to assemble and install rack.
- **BE SURE TO ADJUST RACK FAR ENOUGH TO THE REAR SO REAR DOORS OPEN.**

Parts List

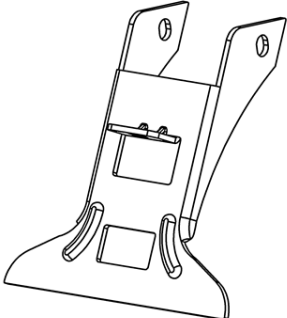ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
A		11-00389-R2	BRACKET, GUTTER MOUNT	6
B		11-02085-RIB-R2	BRACKET, CLAMP, GUTTER MOUNT	6
		18-4089C	HARDWARE KIT	1


Hardware

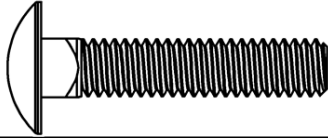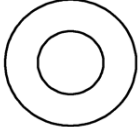ITEM NO.	TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		92356A587	5/16"-18 X 1-1/2 CARRIAGE	6
2		90126A030	5/16" WASHER	6
3		95615A160	5/16"-18, NYLOC	6
4		91247A640	3/8-16 X 4" HEX HEAD	6
5		90126A031	3/8" WASHER	12
6		95615A140	3/8-16 NYLOC	6
7		8009A-00-25-R2	SPACER, 3/8" ID, 1/2" OD, 2.5" LG,	6

DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF!


Step 1 – Find Mount Locations on Roof of Van

- Locate the mounting locations on each side of van. There will be a rain gutter along the edge of the roof.

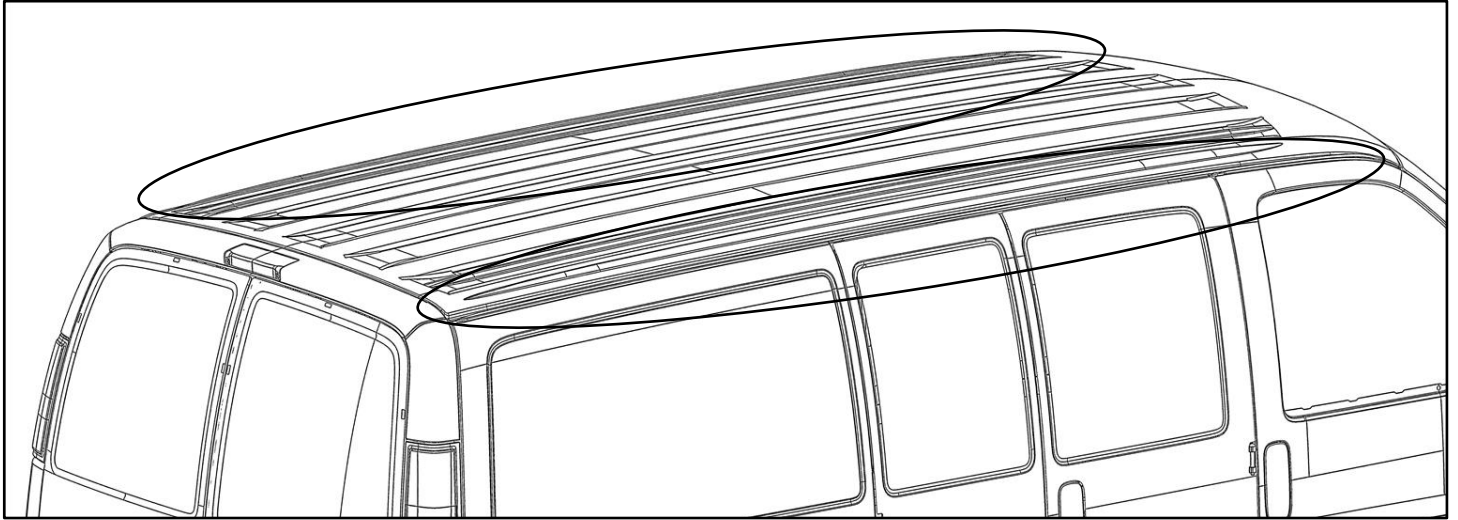




- Determine distance between each cross bar that is to be used to attach to roof. See picture below for reference.
- Take this measurement into consideration when assembling the rack.

Note: The GM van roof curves downward towards the rear of the van, the rear foot should be placed forward of this curve to ensure proper install.

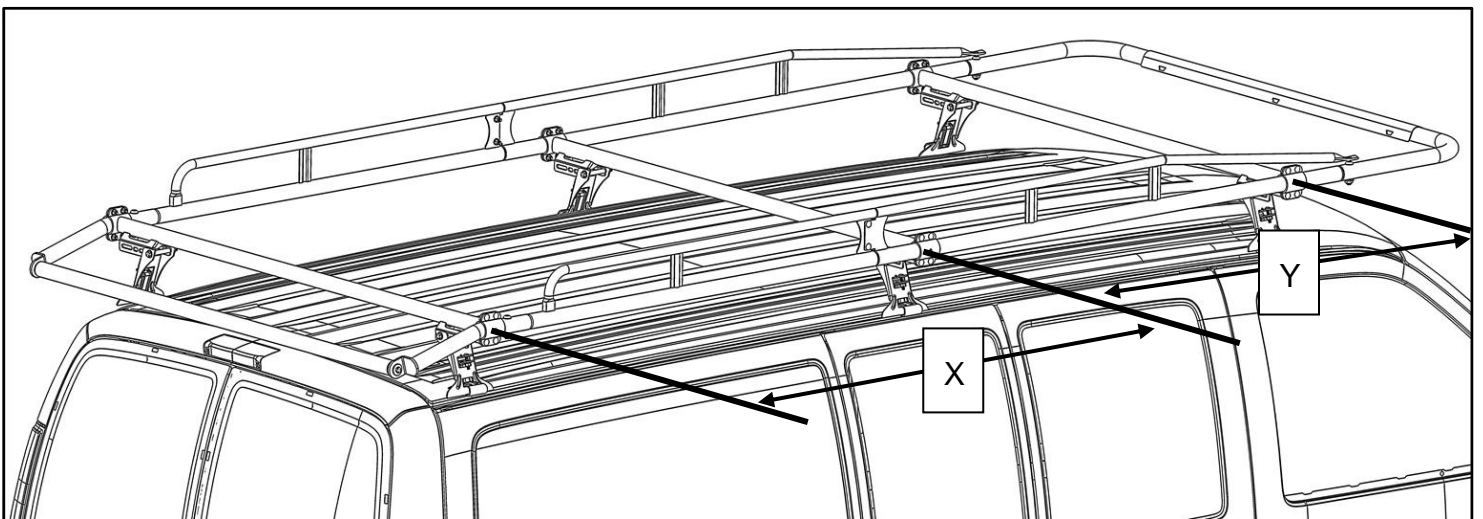


Step 2 – Attach Feet to Crossbar

- Use the cross member from the rack box and attach foot in the orientation shown using 3/8" x 4" hex head bolt, two 3/8" flat washers, 3/8" spacer and a 3/8" lock nut.
- Attach foot through the lowest inner most slot on the cross member as shown.
- Snug tighten but allow movement.
- Repeat for a total of 6 times.

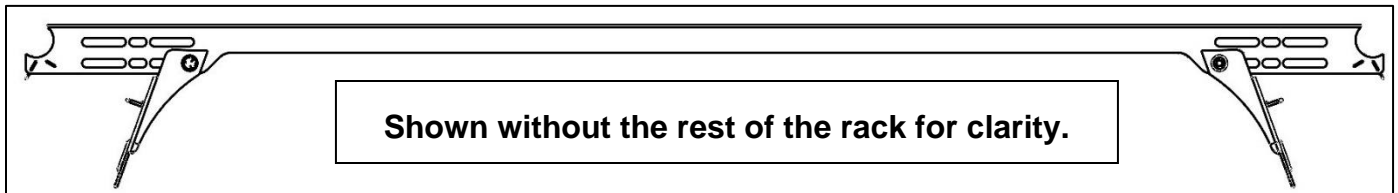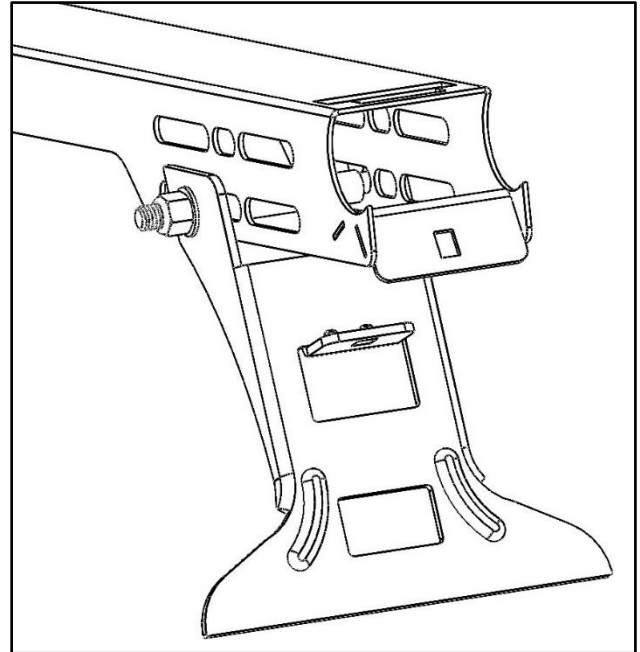
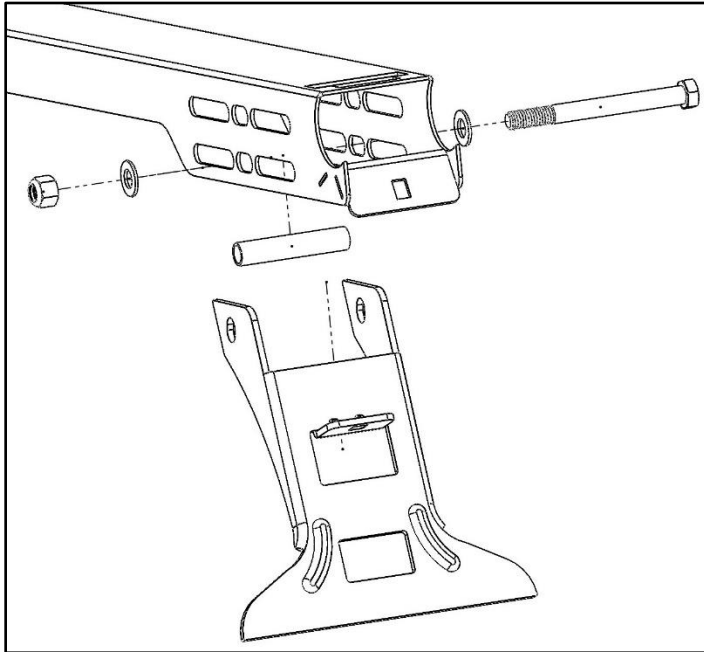


Step 3 – Mount Rack

- Place rack onto roof of van. **Be sure the feet installed in previous step goes onto the rain gutter flange. Be cautious of excess OEM seam sealer build up, feet will not clamp correctly on top of excessive seam sealer.**

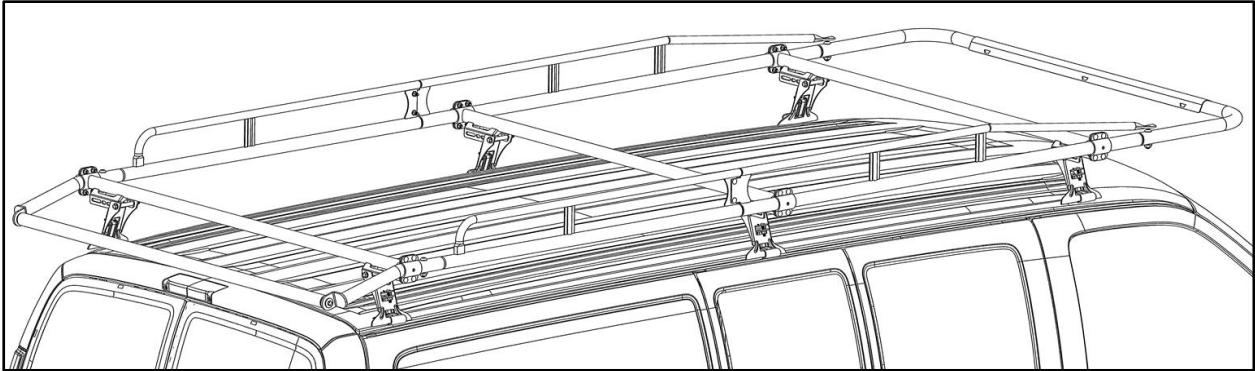

- Adjust and center rack to your liking.
- Slide foot mount bracket through the foot. Squeeze the rain gutter in between the mount bracket and the foot.
- Bolt into place using 5/16" x 1-1/2" carriage bolt, 5/16" flat washer and 5/16" lock nut as shown.
- Repeat for a total of 6 times.
- Once rack is in desired location on roof of van, **TIGHTEN** all bolts. **Do not overtighten clamping 5/16" carriage bolt or damage to roof may occur.**

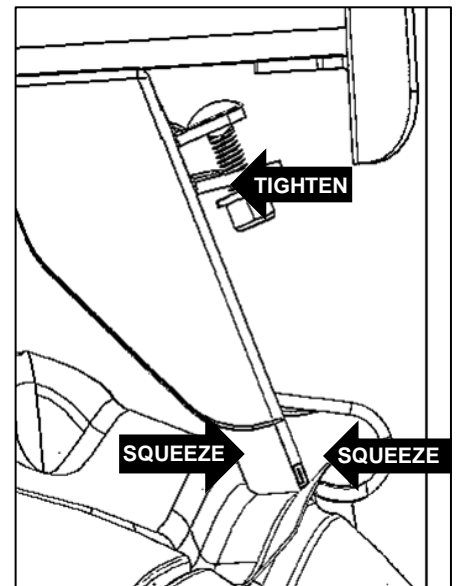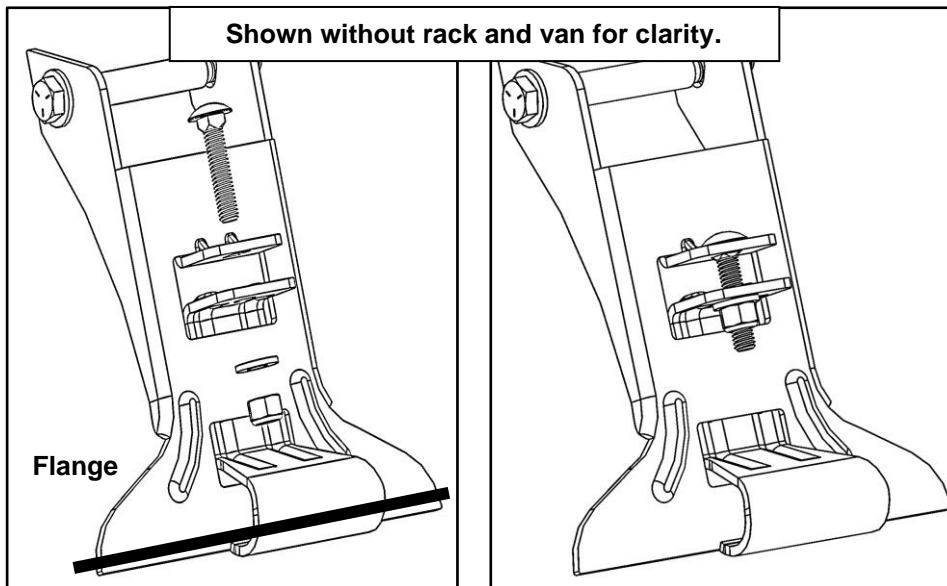

GO BACK AND TIGHTEN ALL HARDWARE.

INSTALLATION IS COMPLETE.