
Holman

Installation Guide

408SC

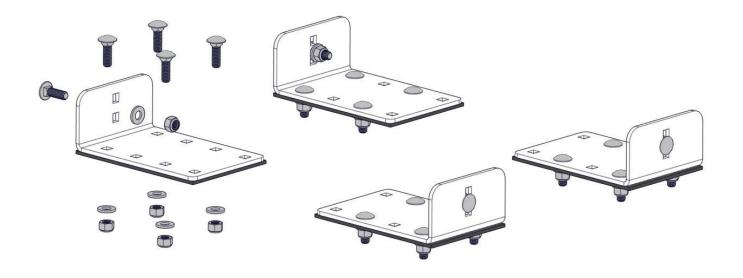

Holman Rancho Cordova, CA 95742 800-343-7486 InstallationSupport@Holman.com

DATE:



PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

.340" Drill	1/2" Socket and Wrench

Table of Contents

Parts List	. 2
Hardware List	. 2
Step 1 – Foot Attachment	
Step 2 – Attach Mounts to Feet	
Step 3 – Place Rack on Shell	
Step 4 – Remove Rack and Drill	
Step 5 – Install Feet Mounts	
Step 6 – Mount Rack	

Before You Begin

- Read all instructions.
- Have desired ladder rack ready to be installed.
- Do NOT exceed manufacturers weight capacity.




Parts/Hardware

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4ADCU-00-001	MOUNT BRACKET, DCU, CAP	4
2	4ADCU-00-002	DCU-CAP-Rubber Pad	4
3	90185A583	5/16-18 x 1 Carriage Bolt	20
4	96659A107	5/16 Flat Washer	20
5	95615A160	5/16-18 Nyloc Nut	20
	BH-821	SEALANT	1




Step 1 – Foot Attachment


• Measure the approximate width of the flat section of the roof on the top of the shell.

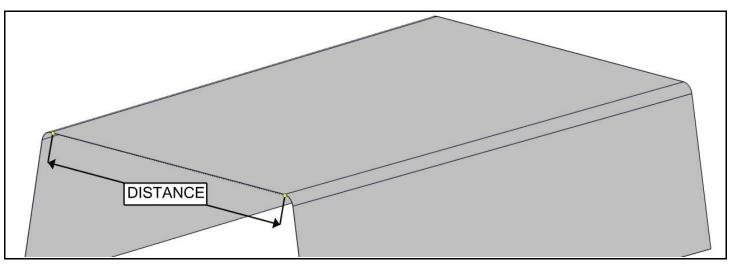

 Determine best mount locations on top of the shell and measure distance between the desired mounting locations.

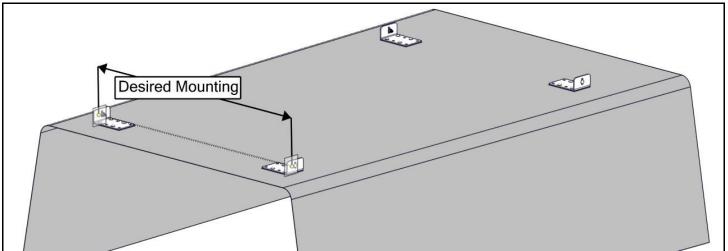

• At the width desired, find the corresponding slots on the ladder rack cross bow and attach mounting feet as shown.

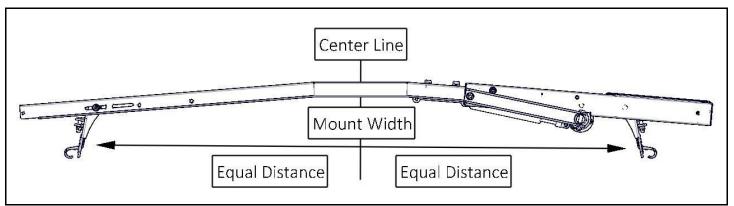



- Be sure there is an equal distance from the center of the cross bow to each foot.
- Leave feet loose until you set the assembly onto the vehicle.




Step 2 – Attach Mounts to Feet

- Attach feet on ladder rack to the mounting brackets from the 408SC kit using 5/16" x 1" carriage bolts, 5/16" flat washers and 5/16" nyloc nuts.
- Repeat at all four mount feet.
- Do NOT tighten. These will be removed in future steps.

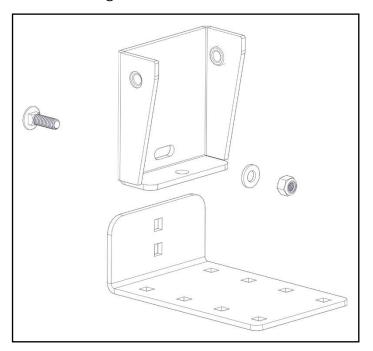

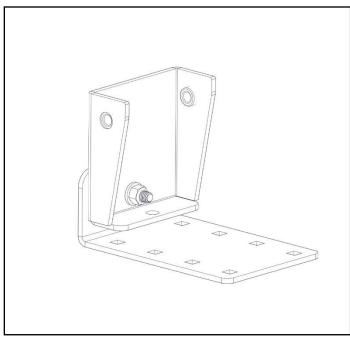


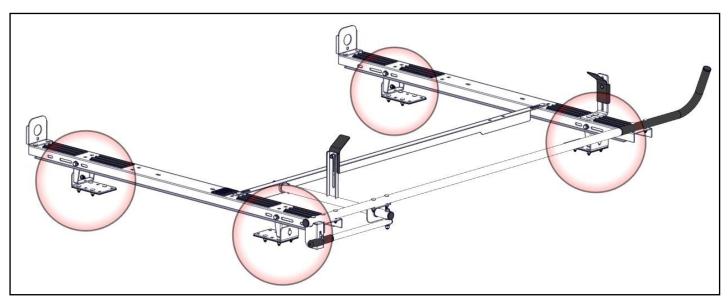




Step 3 – Place Rack on Shell

- Place rack on top of shell. Positon rack to you liking. Be sure the rack is off-set far enough to the rear that one will not hit the shell when loading and unloading a ladder.
- Be sure the handle can be rotated without hitting the side ofo the shell.

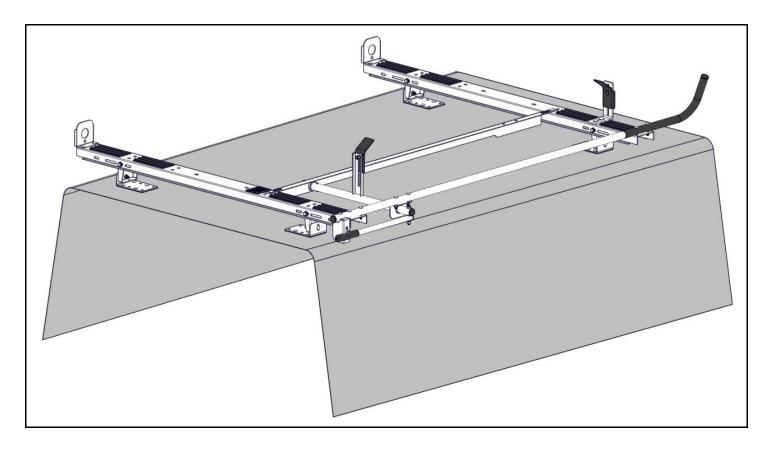

• Mark four locations at each foot mount location onto the top of the shell.

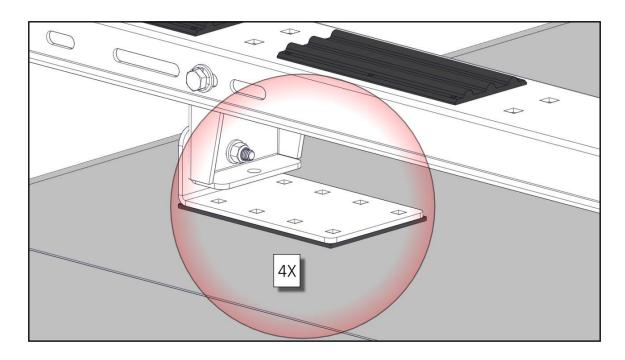




Step 4 - Remove Rack and Drill


- Remove rack with feet and mounts from the top of the shell.
- Drill in previously marked holes using a .340" bit.
- Ensure safety when drilling.


• Remove rack and feet from the feet mounts.

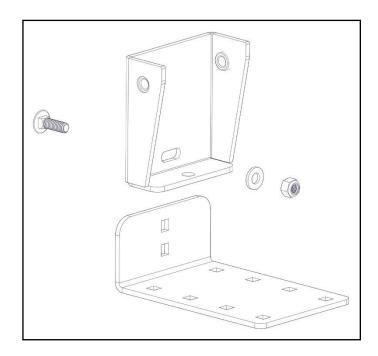

Step 5 – Mount Feet Mounts

- Mount feet mounts to the shell through the previously drilled holes using 5/16" x 1" carriage bolts, 5/16" flat washers and 5/16" nyloc nuts.
- Be sure rubber pad is between shell and mount bracket. Apply a generous amount of sealant around the holes drilled in the shell.
- Place sealant around hardware to ensure no water and leak into shell.
- Snug Tighten, but allow movement.

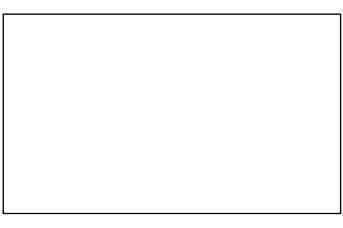


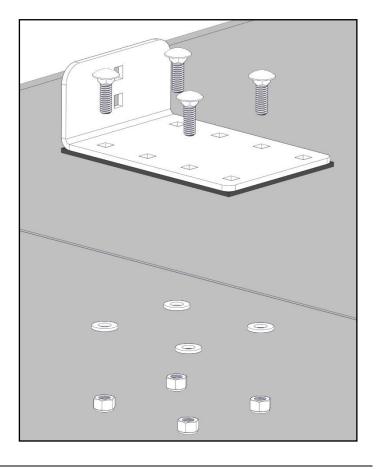





Step 6 – Mount Rack

- Place rack on top of previously installed feet mounts.
- Attach feet on ladder rack to the mounting brackets from the 408SC kit using 5/16" x 1" carriage bolts, 5/16" flat washers and 5/16" nyloc nuts.
- Repeat at all four mount feet.

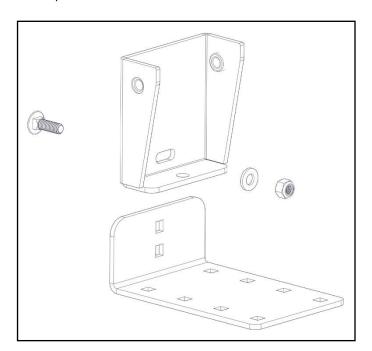

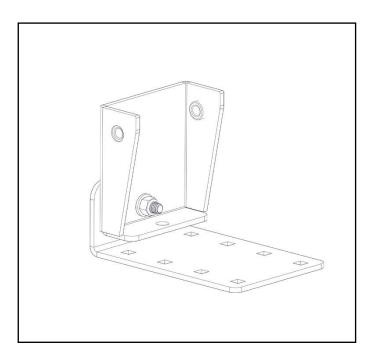

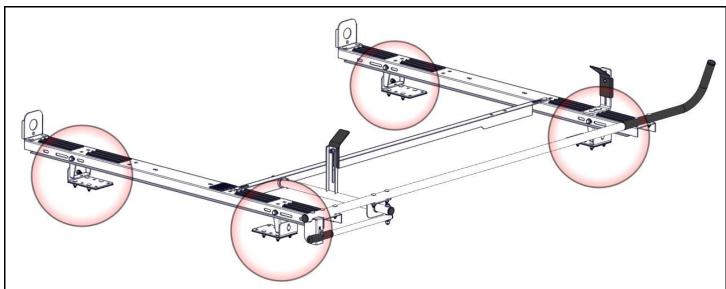

- Align and square rack on the shell.
- TIGHTEN.
- Go back and tighten hardware from step 5.



GO BACK AND ENSURE ALL HARDWARE IS TIGHT

Your installation is now complete.

