Holman

Installation Guide 48161



Holman
Rancho Cordova, CA 95742
800-343-7486
InstallationSupport@Holman.com

DATE:



PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Wrench and Socket	7/16" Wrench and Socket
Phillips Driver	

Table of Contents

Parts List	2
Hardware List	
Step 1 Prepare Shelf Unit	
Step 2 Mount Top Back Panel	
Step 3 Mount Top Shelf	4
Step 4 Align and Square	

Before You Begin

- Read all instructions.
- Have 42" shelf assembled.



<u>Parts</u>

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
A	KD-42-301	Top Shelf	1
В	KD-42-302	Top Back panel	1
	18-48100	Extra Top Shelf Hardware	1


<u>Hardware</u>

ITEM NO.	TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		90272A540	.25-20 x .75 Phillps Head	2
2		90126A029	.25 Flat Washer	2
3		95615A120	.25-20 Nyloc	2
4		90272A244	No10-24 x .625 Phillips Head	6
5		90126A514	No10 Flat Washer	6
6		90631A011	No10-24 Nyloc	6




Step 1 – Prepare Shelf Unit


• Remove both top-rear bolts from assembled shelf unit where the top shelf is installed.

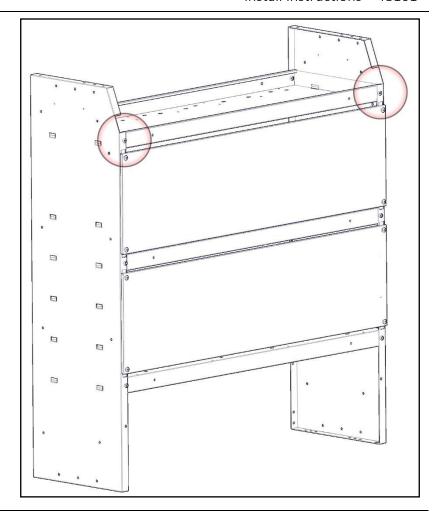

Step 2 – Mount Top Back Panel

- Place Top Back Panel (B) flush against the backside of shelf unit. Bolt through the pemnut where previous bolt was removed.
- Bolt together using a .25 x .75 phillips head
 (1), a .25 flat washer (2) and a .25 nyloc (3)
- Repeat on both sides.
- Snug Tighten, but allow movement.

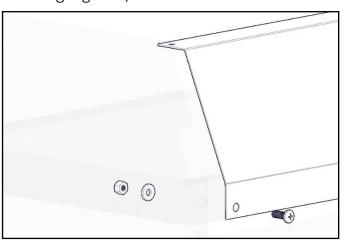

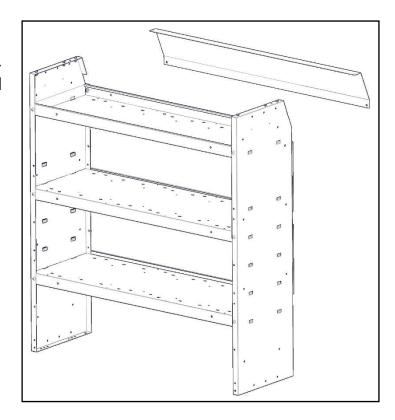




Step 3 – Mount Top Shelf

- Place Top Shelf (A) on top of assembled shelf unit with the Top Back Panel (B).
- Bolt Top Shelf (A) through Top Back Panel (B) and through the top of the shelf assembly using three #10 x .625 phillips head bolt (4), #10 flat washer (5) and a #10 nyloc (6) on each side.
- Repeat on opposite side
- Snug Tighten, but allow movement.



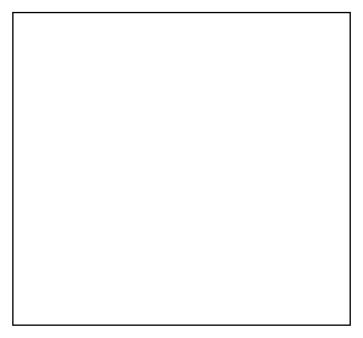

Step 4 – Align and Square

• Align and square top shelf to your liking.

GO BACK AND TIGHTEN <u>ALL</u>
BOLTS
YOUR INSTALLATION IS NOW
COMPLETE

