


GRAB HANDLES - REAR DOOR - TRANSIT, GM, SPRINTER (PAIR)

Part # : 40451

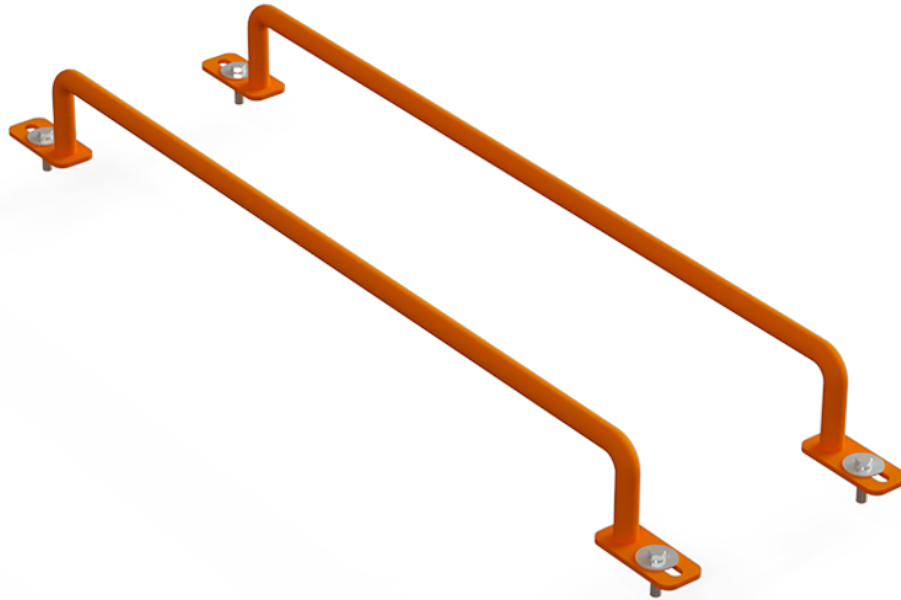

Grab Handles - Rear Door - Transit, GM, Sprinter

The Holman Rear Door Safety Grab Handles are a reliable source of assistance for entering and exiting the rear door of your Ford Transit, GM, or Mercedes Sprinter cargo van.

The product includes plus nuts required for installation. Consider purchasing our Plus Nut Tool (#P9902) if you don't already have a plus nut installation tool.

Vehicle Fit

Ford Transit	Chevy Express/GMC Savana	Mercedes Sprinter
--------------	--------------------------	-------------------

Features:

- Heavy duty steel tube handle
- Quick install
- Orange powder coat finish
- All mounting brackets included
- Mounting Hardware Included