


FORMULA: Percentage of Body and Payload Weight Carried by Axles

Body center = C.A. (or C.T.) - Cab clearance - (Body length ÷ 2)

CENTER OF BODY MUST BE AHEAD OF REAR AXLE CENTERLINE.

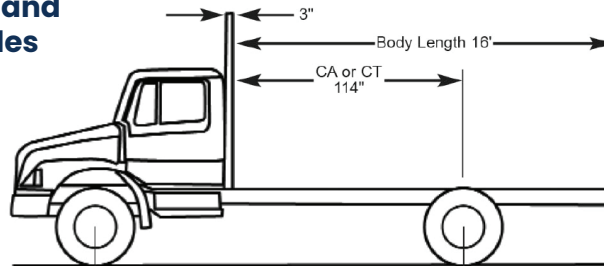

% on front axle = (Body center) ÷ Wheelbase
 % on rear axle = 100% - % on front axle

Example: 15" ÷ 188" W.B. = .0797 or 8% on the front axle, 92% on the rear axle.

Truck Classifications by GVWR

Class 1	0-6,000 lbs.
Class 2	6,001 - 10,000 lbs.
Class 3	10,001-14,000 lbs.
Class 4	14,001 - 16,000 lbs.
Class 5	16,001-19,500 lbs.
Class 6	19,501 - 26,000 lbs.
Class 7	26,001-33,000 lbs.
Class 8	33,001 lbs.+

Dump Body Lengths for Popular C.A.'s (Single Axle)

C.A.	Body Length Recommended*
60"	9'
84"	11'
120"	14'
138"	16'

Dump Body Lengths for Popular C.A.'s (Tandem Axle)

C.T.	Body Length Recommended*
84"	12'
102"	13'6"
108"	14'
120"	15'

Platform/Van Body Lengths for Popular C.A.'s


C.A.	Body Length
56"	8'
60"	9'
72"	10'
84"	12'
102"	13'
108"	14'

Service Body

C.A.	Body Length
56"	8'
60"	9'
84"	11'
108"	13'


*Based on 12' body overhang. C.A. and C.T. measurements are approximate and to be used only for estimating body lengths.

For longer dump bodies, please contact your Holman Sales Representative.

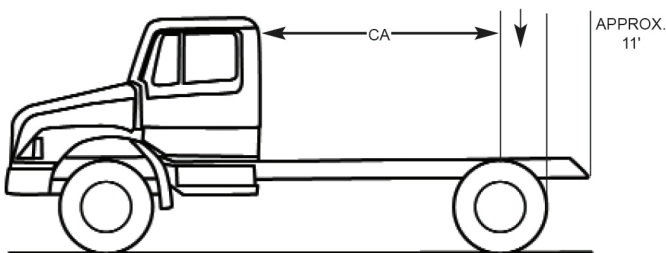

On single axle units - C.A. plus 32" is hinge center. Subtracted from body length will give overhang. No allowance has been made for cab clearance, muffler or exhaust stack interference.

For Technical Support Call: **833-465-6266**.

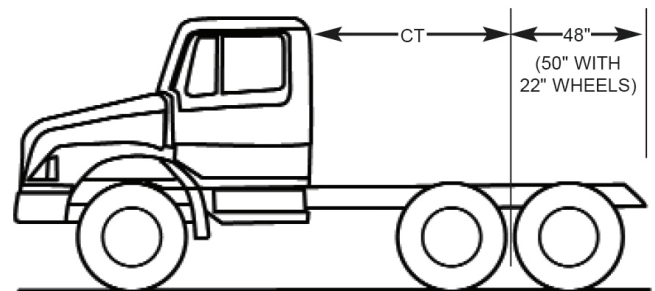

To determine body overhang from the hinge point, use C.T. of chassis plus 48". Subtract this total from the length of body. Remainder is approximate overhang. No allowance has been made from cab clearance, muffler or exhaust stack interference.

Facilities

Chicago	ATI
1420 Brewster Creek Blvd. Bartlett, IL 60103	
630-860-5600	
Colorado Springs	LTE
2425 Platte Place Colorado Springs, CO 80909	
719-597-0400	
Denver	LTD
7007 E 53rd Place Commerce City, CO 80022	
303-365-8828	
Fort Wayne	FWF
14014 Hitzfield Court Roanoke, IN 46783	
260-493-1800	
Fort Worth	DFW
711 Airway Drive Ft. Worth, TX 76106	
817-624-3650	
Fort Worth (Pickup/Dropoff)	
1101 Cantrell Sansom Road Blue Mound, TX 76131 (North Lot)	
Kansas City	KCB
3699 N. Booth Ave. Kansas City, MO 64161	
812-842-4065	
Kansas City (Pickup/Dropoff)	
9450 NE Parvin Rd. Kansas City, MO 64161	
Los Angeles	UU-LA
16208 Garfield Ave Paramount, CA 90723	
562-916-5354	
Louisville	LSV
30 Kingbrook Parkway Simpsonville, KY 40067	
502-489-5480	
New Jersey	MSH
499 A E Kings Highway Maple Shade, NJ 08052	
856-222-0871	
Sacramento	UU-SAC
2587 Mercantile Drive Rancho Cordova, CA 95742	
916-330-4683	
San Diego	UU-SD
5458 Complex Street #401 San Diego, CA 92123	
760-847-4054	
SF Bay Area	UU-HAY
1314 West Winton Ave Hayward, CA 94545	
510-999-8275	
St. Louis	WEN
21 Elaine Drive O'Fallon, MO 63366	
636-281-0390	
Toronto	ATM
2300 Haines Road Mississauga, Ontario L4Y-1Y6	
905-361-9800	
Toll-Free Parts	MFG
877-284-4440	

Ship Through Codes

STELLANTIS

****All Ship-Thru codes have been set-up for ALL family lines with the exception of ProMaster (VF)****

ProMaster vehicles upfit in the US need to be ordered as Ship-To

SHIP THROUGH CODE	Facility
99801A	ATI
99802A	FWF
99800A	MSH
99783A	ATM

All Models including Promaster Van

FORD

SHIP THROUGH CODE	Facility
31A / D9B	ATI
Edge	
31A / D9G	ATI
Explorer (Police & Non-Police)	
31A / D9N	ATI
Explorer (Police & Non-Police) U625 Explorer Police 3.3L FHEV U625 Explorer Police 3.0L GAS U625 Explorer Retail 3.3L HEV U625 Explorer Retail 3.0L PHEV CAP	
31A / D9L	FWF
Ranger	
31E / D9F	ATI
F-150	
31J / D9D	LSV
E-Series	
31L / D9E	LSV
Super Duty, Excursion	
31L / D9U	LSV
Escape	
31A / D9K	KCB
F-150, Transit F-150 (Non-Police & Police Responder)	
31A / D9F	KCB
F-150 Hybrid Only	
31A / D9W	KCB
F-150 Lightning	
31A / D9R	KCB
Maverick	
31A / D9M	KCB
Mustang Mach-E	
31T / D9I	MSH
Transit Connect	
36A	ATM
F-150, Super Duty, Transit Low Roof, Transit Connect, Escape, Focus, Fusion, Explorer, Taurus	

GM

SHIP THROUGH CODE	Facility
TRE	FWF
Silverado / Sierra - 1500 Crew Cab / Double Cab	
VDT	FWF
Silverado / Sierra - 1500 Crew Cab / Double Cab with (CGN) Spray-On Bedliner	
VUI	FWF
Silverado / Sierra - 2500HD / 3500HD Silverado / Sierra - 3500HD Chassis Cab	
TCE	FWF
Silverado / Sierra - 2500HD / 3500HD with (CGN) Spray-On Bedliner	
CAM	FWF
Equinox	
VWG	FWF
Silverado 4500HD / 5500HD / 6500HD	
VGZ	FWF
Traverse LTD / All-New Traverse	
TKK	FWF
Silverado EV	
SQH	FWF
Silverado EV with (CGN) Spray-On Bedliner	
VDH	DFW
Tahoe / Suburban	
VII	DFW
Silverado / Sierra - 1500 Regular Cab / Crew Cab	
TBQ	STL
Colorado / Canyon Express / Savanna Express Cutaway / Savanna Cutaway (SRW)	
VAL	STL
Colorado / Canyon Express / Savanna with (CGN) Spray-On Cargo Liner	
VCY	DFW
Blazer	
297720	ATM
All Models	

MERCEDES-BENZ

SHIP THROUGH CODE	Facility
5117	ATM
Sprinter	

TOYOTA

SHIP THROUGH CODE	Facility
9B	DFW
Tundra	
9N	DFW
Tacoma	

For Technical Support Call: **833-465-6266**.

	Chevy	Chevy BAC	GMC	GMC BAC	Stellantis	Ford	Mercedes-Benz	Nissan	Toyota
ATI	93022	313686	93022	313686	T1560	88NX79	UN1Z	X2485	12200
LTE	93028	313692	93028	313692	T4845	88TZ11	UN2Z	X2489	5790
FWF	93027	313691	93027	313691	T5299	88MW23	UN3Z	X2491	13100
DFW	93024	313688	93024	313688	T9474	88RDP1	UN4Z	X2486	42517
KCB	93025	313689	93025	313689	T5600	88QFG6	UN5Z	X2487	24860
UU-LA	296752	-	296752	-	-	88WUR5	-	-	54812
LSV	93029	313693	93029	313693	T8488	88MAV5	UN6Z	X2490	16889
MSH	93026	313690	93026	313690	T9963	88DNX8	UN0Z	X2492	29705
UU-SAC	296752	-	296752	-	-	88WUS4	-	-	54814
UU-SD	296752	-	296752	-	-	88WUD9	-	-	54813
UU-HAY	296752	-	296752	-	-	88WUQ8	-	-	54815
WEN	93030	313694	93030	313694	T2098	88QWV7	UN7Z	-	24859
ATM	81965	297720	81965	297720	CX740	B1015	-	-	-

FREIGHTLINER - WESTERN STAR - CALL FOR MORE INFO

For Technical Support Call: **833-465-6266**.